


FLUID COUPLINGS
INSTALLATION AND MAINTENANCE

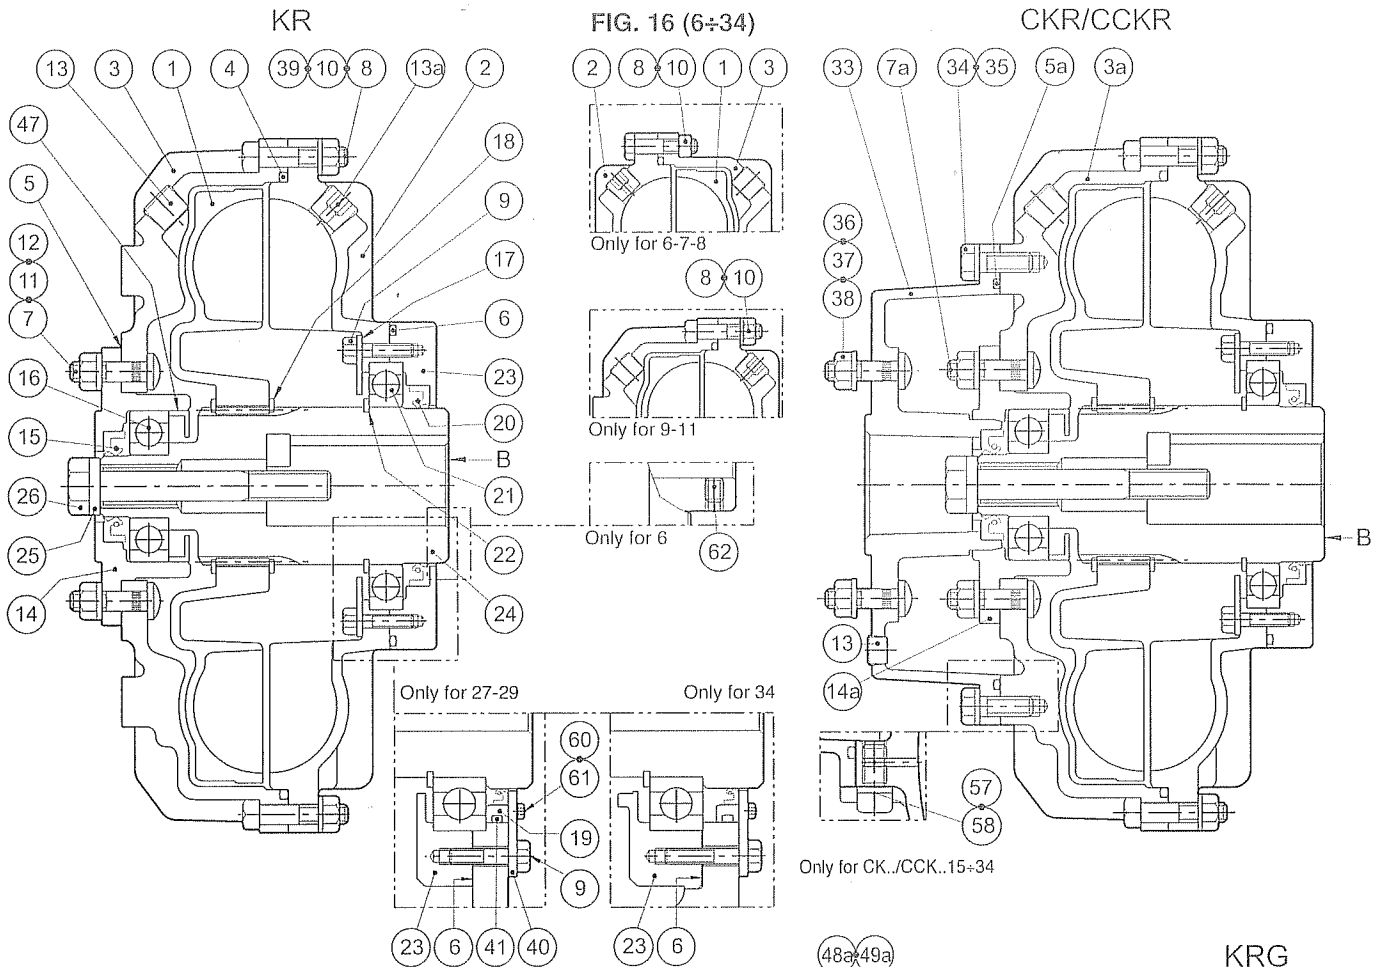

POS.	NAME
1	IMPELLER (INNER)
2	IMPELLER (OUTER)
3-3a	COVER
4	O-RING
5-5a	GASKET OR O-RING
6	GASKET OR O-RING
7-7a	SCREW
8	SCREW
9	SCREW
10	NUT
11	NUT
12	LOCK WASHER
13	PLUG
13a	FUSIBLE PLUG
14-14a	BEARING CARRIER
15	SEAL
16	BALL BEARING
17**	PLATE
18	SNAP RING
19	SEAL CARRIER
20	SEAL
21	BALL BEARING
22	SNAP RING
23	BEARING CARRIER

** excluded 6

POS.	NAME
24	SHAFT
25	LOCK WASHER
26	FIXING SCREW
27	FLANGE G
28	RUBBER BLOCK
29	HALF JOINT G
30	HALF JOINT B
31	SHAFT D
31.1	KEY
33	D.F. CHAMBER
34	SCREW
35	LOCK WASHER
36	SCREW
37	NUT
38	LOCK WASHER
39	LOCK WASHER
47*	OIL RETAINER
48-48a	SCREW
49-49a	LOCK WASHER
57	VALVE ASSEMBLY
58	GASKET
62	SET SCREW
67	ADAPTOR

* only for 15÷34

