


HOW TO ORDER

1. Determine number of lubrication points and select corresponding PurgeX® model with the correct number of feeds.
2. Select liquid or grease reservoir with appropriate capacity.
3. Select a 3-way solenoid operated air valve to turn lubrication cycle on and off.
4. Select a timer or use machine controls to signal solenoid valve.
5. Select tubing and fittings.

See pages 19 and 20 for accessory model numbers

B3584 Installation of PurgeX® Spray Injector Pump

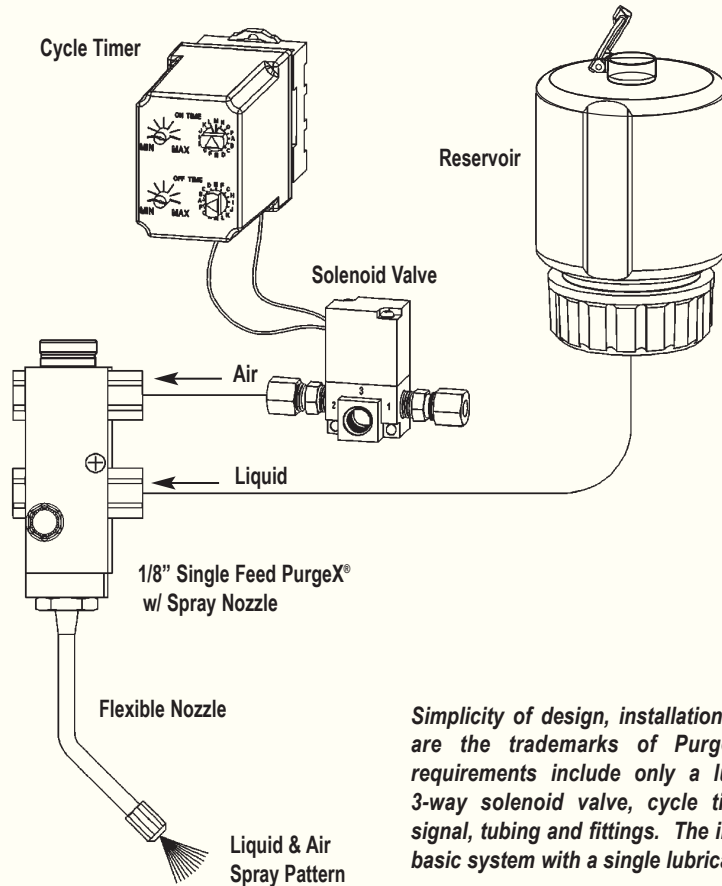

Simplicity of design, installation, and maintenance are the trademarks of PurgeX®. The basic requirements include only a lubricant reservoir, 3-way solenoid valve, cycle timer or sequence signal, tubing and fittings. The illustration shows a basic system with a single lubricant feed point.

SELECTION CHART

Liquid/Grease Spray 1/8"		Liquid Spray 1/4"		Grease Spray 1/4" Buna-N	No. of Feeds	A Ref.
Buna-N	Viton®	Buna-N	Viton®			
B3584-101	B3584-301	B3559-101	B3559-301	B3559-401	1	1-31/32
B3584-102	B3584-302	B3559-102	B3559-302	B3559-402	2	3-7/32
B3584-103	B3584-303	B3559-103	B3559-303	B3559-403	3	4-15/32
B3584-104	B3584-304	B3559-104	B3559-304	B3559-404	4	5-23/32
B3584-105	B3584-305	B3559-105	B3559-305	B3559-405	5	6-31/32
B3584-106	B3584-306	B3559-106	B3559-306	B3559-406	6	8-7/32

Viton® is a registered trademark of DuPont

