

Safety shut-off valve JSAV

Technical Information · GB

2 Edition 11.12




- For positive pressure
- DN 25, DN 40: for negative pressure
- Large adjusting range for trip pressure
- Low pressure loss
- No purge line required
- EC type-tested and certified
- Certified pursuant to GOST-TR




krom
schröder

Contents

- Safety shut-off valve JSAV 1
- Contents 2
- 1 Application 3
 - 1.1 Example of application. 4
- 2 Certification 5
- 3 Function 6
 - 3.1 JSAV 25–40 6
 - 3.2 JSAV 50–100 7
- 4 Flow rate 8
- 5 Selection 9
 - 5.1 Type code 9
- 6 Project planning information 10
 - 6.1 Installation 10
- 7 Accessories 11
 - 7.1 Reset lever 11
- 8 Technical data 11
 - 8.1 Spring table 12
 - 8.1.1 JSAV 25–40../1, JSAV 25–40../2 12
 - 8.1.2 JSAV 50–100. 12
 - 8.2 Dimensions 13
 - 8.2.1 SAV 25–40 with Rp internal thread to ISO 7-1 or PN 16
flange to ISO 7005. 13
 - 8.2.2 JSAV 25–40 with NPT internal thread 13
 - 8.2.3 JSAV 50–100 with PN 16 flange to ISO 7005 14
 - 8.2.4 JSAV 50–100 with ANSI flange. 14
- 9 Maintenance cycles 15
- Feedback 16
- Contact 16

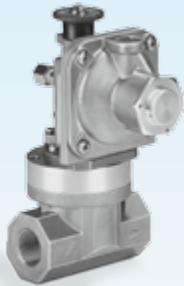

JS AV 25

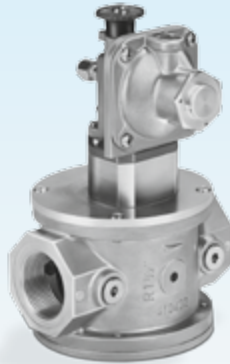

JS AV 40



JS AV 50-100


1 Application

Controls which are connected downstream of a gas pressure regulator are secured against excess gas pressure.

If the required operating conditions are not met, the gas supply is shut off.

A safety shut-off valve is required in accordance with EN 746-2 for all gas pressure control systems in which the controls downstream of the gas pressure regulator are not resistant to the supply pressure.

1.1 Example of application

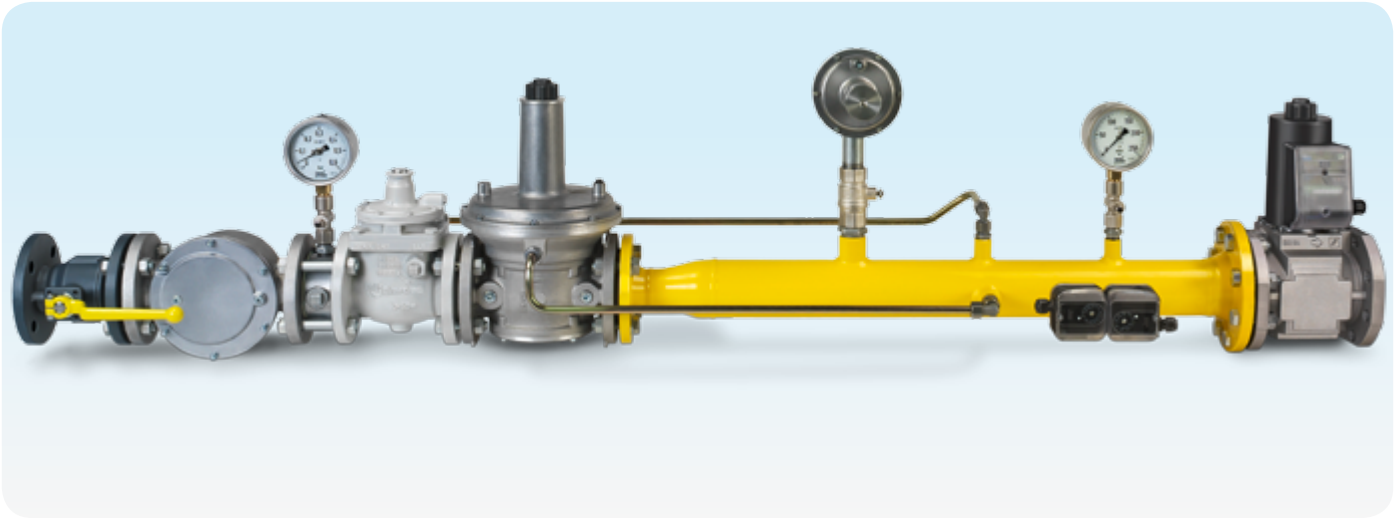

The JSAV protects all controls downstream of the gas pressure regulator in the gas inlet section.

2 Certification

EC type-tested and certified



JSAV 25–40

pursuant to

- Gas Appliances Directive (2009/142/EC)
 - Pressure Equipment Directive (97/23/EC), Class A
JSAV 25–40 with over-pressure/under-pressure shut-off
 - Pressure Equipment Directive (97/23/EC), Class B
JSAV 25–40 with over-pressure shut-off
- in conjunction with
- DIN EN 14382 (07/09)

JSAV 50–100

pursuant to

- Gas Appliances Directive (90/396/EEC)
 - Pressure Equipment Directive (97/23/EC)
- in conjunction with
- DIN EN 3381 (06/84)

JSAV 25–100

- Declaration of conformity (D, GB) – see www.docuthek.com → Elster Kromschroder → Products → 02 Pressure regulators → Safety shut-off valves JSAV → Kind of document: Certificate → JSAV 25...40 R/F and JSAV 50...100 F (K OS Konformitätserklärung) (D, GB)

Approval for Russia



Certified by Gosstandart pursuant to GOST-TR.

Approved by Rostekhnadzor (RTN).

Scan of the approval for Russia (RUS) – see www.docuthek.com


→ Elster Kromschroder → Products → 02 Pressure regulators

→ Safety shut-off valves JSAV → Kind of document: Certificate

→ JSAV B00071 (nationales Zertifikat Russland) (RUS)

3 Function

3.1 JSAV 25–40

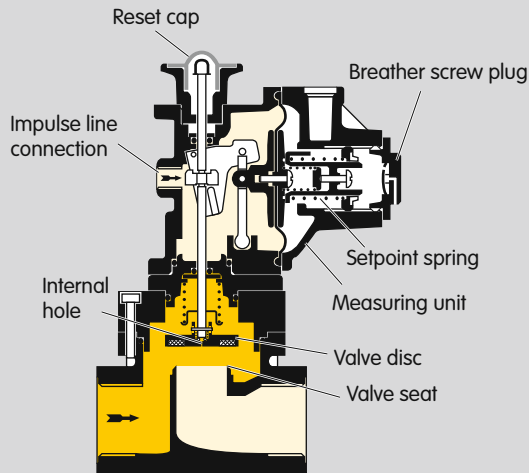

The trip pressure is set using the setpoint spring in the measuring unit. The JSAV measures the pressure downstream of the gas pressure regulator via an external impulse line.


The JSAV closes once the set trip pressure has been reached. The valve disc is pressed onto the valve seat and thus shuts off the gas supply safely.

The position of the valve disc can be seen through the transparent reset cap.

The JSAV is manually reset. To do so, the pressure in the impulse line must be between the upper and lower trip pressure. First, unscrew and remove the breather screw plug. Then loosen the reset cap. By pulling the reset cap slightly, the pressure is equalized via an internal hole in the valve disc. Once pressure equalization is complete, the reset cap can be lifted easily and the valve disc is engaged in the open position.

A relief line is not required on the measuring unit because a maximum of 30 l/h can escape via the hole in the breather screw plug.

3.2 JSAV 50–100

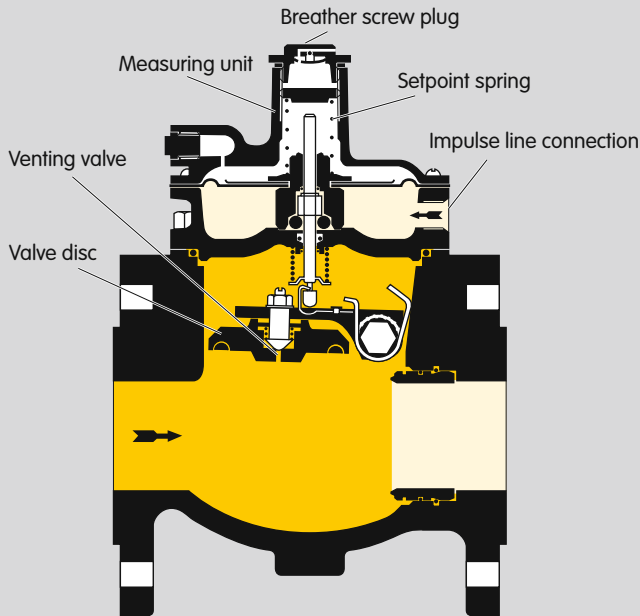

The trip pressure is set using the setpoint spring in the measuring unit. The JSAV measures the pressure downstream of the gas pressure regulator via an external impulse line.

The JSAV closes once the set trip pressure has been reached. The valve disc is pressed onto the valve seat and thus shuts off the gas supply safely.


The device can simply be manually reset. The pressure in the impulse line must be distinctly below the trip pressure.

First, unscrew and remove the breather screw plug. To begin with, a pressure equalization is carried out via the integrated venting valve in the valve disc using the supplied reset lever. Afterwards, the valve disc is fully opened and finally engages.

A relief line is not required on the measuring unit because a maximum of 30 l/h can escape via the hole in the breather screw plug.

The free-flow valve design allows for a very large flow rate despite a compact design.

4 Flow rate

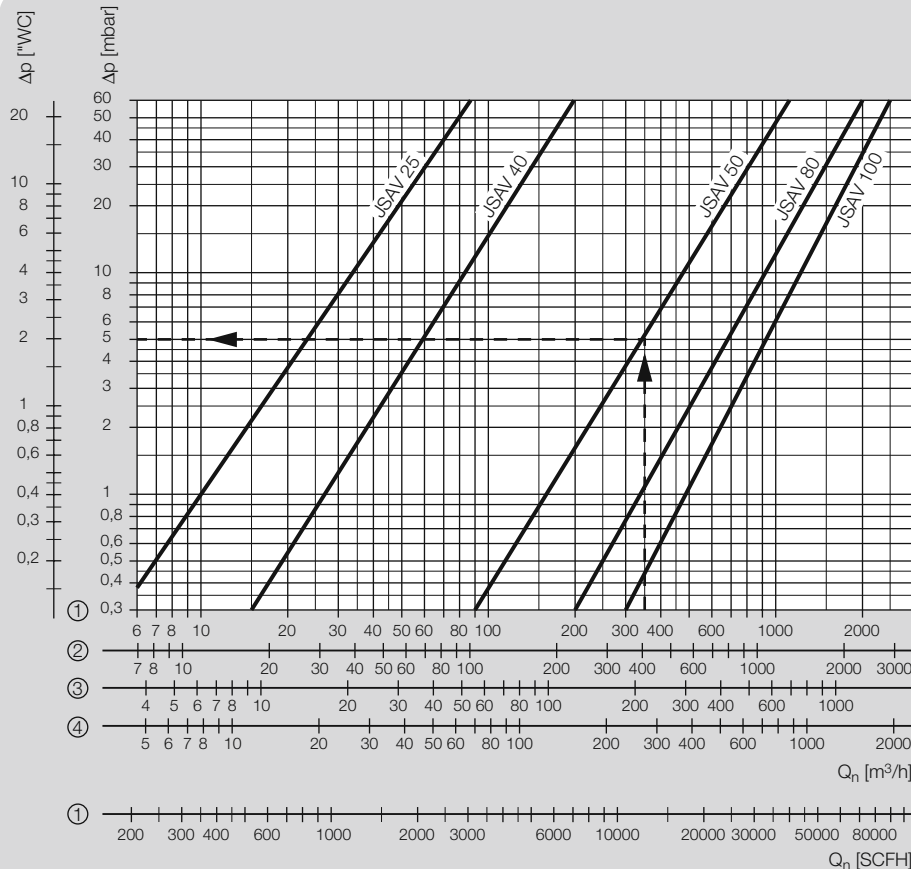

Reading instructions:

When determining the pressure loss, operating cubic metres must be entered. Then the pressure loss Δp read must be multiplied by the absolute pressure in bar (positive pressure + 1) to account for the change in the medium's density.

Example:

inlet pressure p_u (positive pressure) = 4 bar,
gas type: natural gas,
operating flow rate $Q_b = 350 \text{ m}^3/\text{h}$,
selected in the diagram: JSAV 50,
 Δp from diagram = 5 mbar,
 $\Delta p = 5 \text{ mbar} \times (1 + 4) = 25 \text{ mbar}$ on JSAV 50

① = natural gas ($\rho = 0.80 \text{ kg/m}^3$)

② = town gas ($\rho = 0.64 \text{ kg/m}^3$)

③ = LPG ($\rho = 2.01 \text{ kg/m}^3$)

④ = air ($\rho = 1.29 \text{ kg/m}^3$)

5 Selection

Type	T	R	N	F	A	40	/1	/2	-0	-3
JSAV 25	○	●	●			●	●	●	●	
JSAV 40	○	●	●	●		●	●	●		●
JSAV 50	○			●	●	●			●	
JSAV 80	○			●	●	●			●	
JSAV 100	○			●	●	●			●	

● = standard, ○ = available

Order example

JSAV 80F40-0


5.1 Type code

Code	Description
JSAV	Safety shut-off valve
25, 40, 50, 80, 100	Nominal size
T	T-product
R	Rp internal thread to ISO 7-1
N	NPT internal thread
F	PN 16 flange to ISO 7005
A	ANSI flange
40	Inlet pressure $p_{u \max.} = 4 \text{ bar (58 psig)}$
/1	Over-pressure shut-off p_{do}
/2*	Over-pressure and under-pressure shut-off p_{do}/p_{du}
-0	Without pressure test point
-3	Screw plug at the inlet and outlet

* Over-/Under-pressure shut-off p_{do}/p_{du} only available for
DN 25 and DN 40


6 Project planning information

6.1 Installation

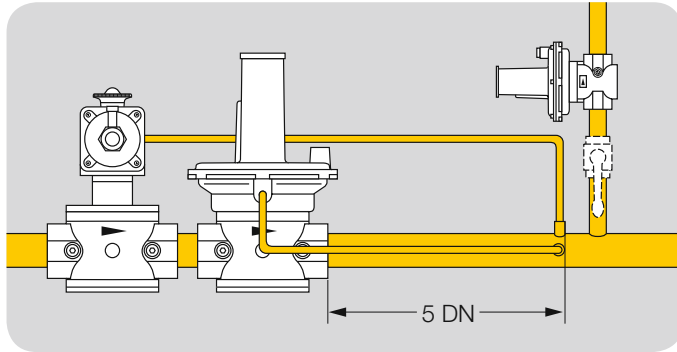


If the controls downstream of the gas pressure regulator are not resistant to the supply pressure, EN 746-2 prescribes a safety shut-off valve upstream and a safety relief valve downstream of the gas pressure regulator – regardless of how high the inlet pressure is.

Ensure that there is sufficient tube length for the impulse line.

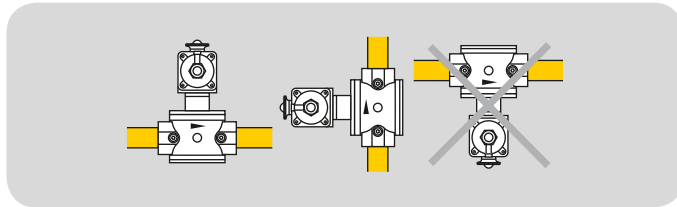


Installation position: vertical or horizontal, never upside down.

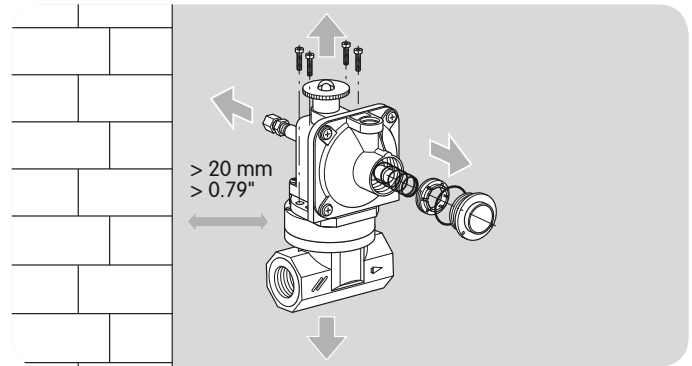

Install the unit free of mechanical stress and so that it is not in contact with masonry (min. distance 20 mm).

Ensure that there is sufficient space for installation, adjustment and maintenance work.

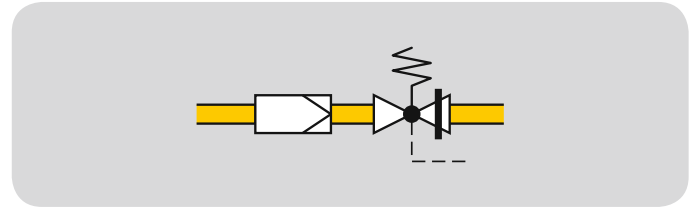


Sealing material and thread cuttings must not be allowed to get into the valve housing. Install a filter upstream of every system.

Do not store or install the unit in the open air.

7 Accessories

7.1 Reset lever

Reset lever to reset JSAV 50–100:

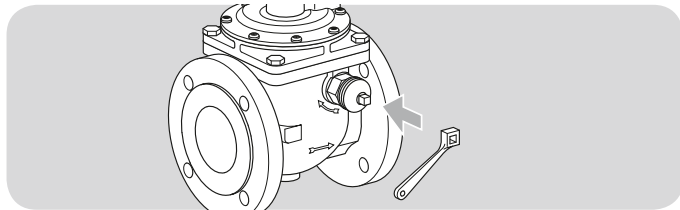

Order No.: 03151140.

8 Technical data

Gas type: natural gas, town gas, LPG (gaseous), biologically produced methane (max. 0.02 %-by-vol. H_2S) and air. The gas must be dry in all temperature conditions and must not contain condensate.

Max. inlet pressure p_u 4 bar (58 psig).

Max. test pressure for testing the JSAV:

inlet and outlet: temporarily < 15 min. 6 bar (87 psig).

Impulse line: temporarily < 15 min. 750 bar (10.8 psig).

Trip pressures p_{do}/p_{du} pre-set at the factory:

upper trip pressure p_{do} : 120 mbar (46.8 "WC),

JSAV 25–40: lower trip pressure p_{du} : 10 mbar (3.9 "WC).

Trip pressure ranges, see spring table.

Accuracy group: AG 10.

Ambient temperature:

-15 to +60°C (5 to 140°F).

Connection for housing:

JSAV..R: Rp internal thread to ISO 7-1,

JSAV..N: NPT internal thread,

JSAV..F: PN 16 flange to ISO 7005,

JSAV..A: ANSI flange.

Connection for impulse line:

JSAV 25–40: DN 8 ($1/8$ NPT),

JSAV 50–100: DN Rp $1/4$ ($1/4$ NPT).

Housing:

JSAV 25–40: AISi,

JSAV 50–100: GGG 40.

Technical data

Diaphragm: NBR.

Valve seat: aluminium.

Valve stem: stainless steel.

Valve disc:

JSAV 25–40: steel with vulcanized NBR seal,

JSAV 50–100: aluminium with vulcanized NBR seal.

8.1 Spring table

Various trip pressure ranges can be achieved by using different springs.

8.1.1 JSAV 25–40../1, JSAV 25–40../2

Upper trip pressure p _{do}		Marking	Order No.
[mbar]	[°WC]		
18–60*	7–23.4*	black	03089068*
50–80	19.5–31.2	orange	03089069
60–110	23.4–42.9	red	03089070
100–210**	39–81.9**	dark green	03089071**
200–350	78–136.5	yellow	03089072
280–500	109.2–195	white	03089073

Lower trip pressure p _{du}		Marking	Order No.
[mbar]	[°WC]		
8–16**	3.12–6.24**	light blue	03089082**
16–60	6.24–23.4	brown	03089083
60–150	23.4–58.5	violet	03089084

* Approved for pressures from 40 mbar and higher


** Standard spring

8.1.2 JSAV 50–100

Trip pressure p _{do}		Marking	Order No.
[mbar]	[psig]		
35–70	0.51–1.02	light blue	03089063
60–170*	0.9–2.5	reddish brown	03089064*
120–220	1.74–3.2	crimson	03089065
190–400	2.8–5.8	orange/yellow	03089066
300–550	4.35–8	orange/green	03089067

* Standard spring

8.2 Dimensions

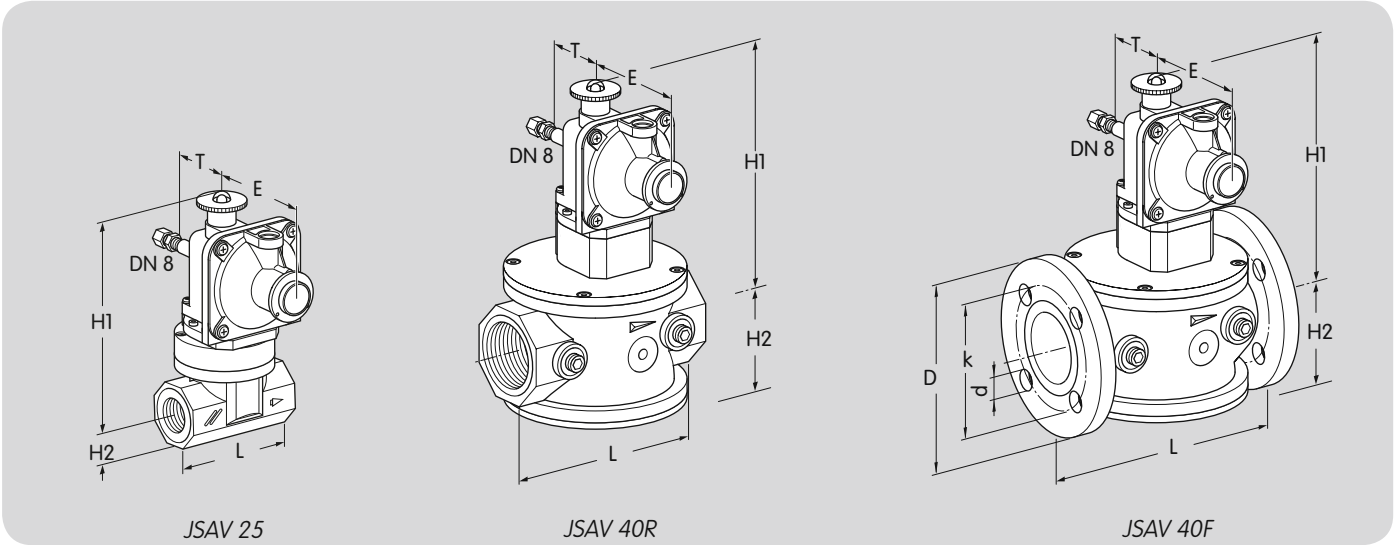


8.2.1 SAV 25–40 with Rp internal thread to ISO 7-1 or PN 16 flange to ISO 7005

Type	Connection	Dimensions [mm]					Flange [mm]		Drillings		Weight [kg]
		H1	H2	L	T	E	D	k	d [mm]	Number	
JSAV 25R40	Rp 1	159	23	91	43	87	–	–	–	–	1
JSAV 40R40	Rp 1½	206	51	150	43	87	–	–	–	–	2.3
JSAV 40F40	DN 40	187	75	200	43	87	150	110	18	4	3.1

8.2.2 JSAV 25–40 with NPT internal thread

Type	Connection	Dimensions [inch]					Weight	
		H1	H2	L	T	E	[lbs]	
JSAV 25TN40	1 NPT	6.14	0.91	3.58	1.70	3.42	2.2	
JSAV 40TN40	1½ NPT	7.36	2.20	5.91	1.70	3.42	4.85	

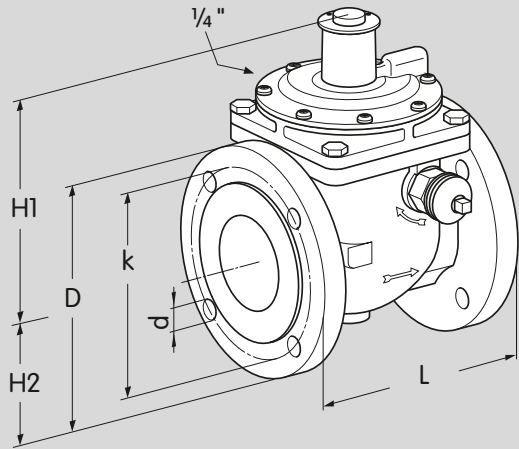

8.2.3 JSAV 50–100 with PN 16 flange to ISO 7005

Type	Connection	Dimensions [mm]			Flange [mm]		Drillings		Weight [kg]
		H1	H2	L	D	k	d [mm]	Number	
JSAV 50F40	DN 50	185	83	180	165	125	18	4	12
JSAV 80F40	DN 80	195	100	220	200	160	18	8	16
JSAV 100F40	DN 100	225	110	270	220	180	18	8	22

8.2.4 JSAV 50–100 with ANSI flange

Type	Connection	Dimensions [inch]			Flange [inch]		Drillings		Weight [lbs]
		H1	H2	L	D	k	d [inch]	Number	
JSAV 50TA40	DN 50	7.28	3.27	7.09	6.50	4.92	0.71	4	12
JSAV 80TA40	DN 80	7.68	3.94	8.66	7.87	6.30	0.71	8	16
JSAV 100TA40	DN 100	8.86	4.33	10.63	8.66	7.09	0.71	8	22

9 Maintenance cycles

At least once a year, twice a year in the case of biologically produced methane.

Feedback

Finally, we are offering you the opportunity to assess this "Technical Information (TI)" and to give us your opinion, so that we can improve our documents further and suit them to your needs.

Clarity

Found information quickly
Searched for a long time
Didn't find information
What is missing?
No answer

Comprehension

Coherent
Too complicated
No answer

Scope

Too little
Sufficient
Too wide
No answer



Use

To get to know the product
To choose a product
Planning
To look for information

Navigation

I can find my way around
I got "lost"
No answer

My scope of functions

Technical department
Sales
No answer

Remarks

(Adobe Reader 7 or higher required)
www.adobe.com

Contact

Elster GmbH
Postfach 2809 · 49018 Osnabrück
Strotheweg 1 · 49504 Lotte (Büren)
Germany
T +49 541 1214-0
F +49 541 1214-370
info@kromschroeder.com
www.kromschroeder.com
www.elster.com

The current addresses of our international agents are available on the Internet:
www.kromschroeder.de/index.php?id=718&L=1

We reserve the right to make technical modifications in the interests of progress.
Copyright © 2013 Elster Group
All rights reserved.

