


FLANK DRIVE® IMPACT SOCKETS



IMM150A



315IMMYA

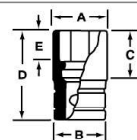

Shallow, mm

Set
Contains:
 315IMMYA
 312IMM
 310IMMYA
 315IMDMYA

mm	6	12	A	B	C	D	E	6	6	6	12
10	IMM100A	IMDM100A	15.0	22.6	22.2	38.1	7.9	•		•	•
11	IMM110A	IMDM110A	18.2	22.6	22.2	38.1	8.7	•		•	•
12	IMM120A	IMDM120A	19.0	24.3	22.2	38.1	9.5	•		•	•
13	IMM130A	IMDM130A	20.6	24.3	22.2	38.1	10.3	•		•	•
14	IMM140A	IMDM140A	22.2	24.3	22.2	38.1	10.3	•		•	•
15	IMM150A	IMDM150A	23.8	26.4	22.2	38.1	10.3	•	•	•	•
16	IMM160A	IMDM160A	24.6	26.4	22.2	38.1	11.9	•	•	•	•
17	IMM170A	IMDM170A	25.4	26.7	22.2	38.1	12.7	•	•	•	•
18	IMM180	IMDM180	26.7	26.7	19.1	38.1	12.7	•	•	•	•
19	IMM190	IMDM190	28.3	28.3	21.3	38.1	12.7	•	•	•	•
20	IMM200	IMDM200	29.9	29.9	21.1	38.1	14.2	•	•		•
21	IMM210	IMDM210	31.5	31.5	21.0	38.1	14.2	•	•		•
22	IMM220	IMDM220	33.3	33.3	21.4	38.1	15.9	•	•		•
23	IMM230	IMDM230	34.1	34.1	27.8	44.5	15.9	•	•		•
24	IMM240	IMDM240	34.9	34.9	27.8	44.5	15.9	•	•		•
25	IMM250	—	29.8	29.8	27.0	44.5	15.9		•		
26	IMM260	—	38.1	38.1	33.3	50.8	15.9				
27	IMM270	IMDM270	39.4	39.4	27.1	50.8	20.3		•		
29	IMM290	—	41.1	41.1	33.3	50.8	21.1				
30	IMM300	—	42.7	42.7	32.1	50.8	21.6				
32	IMM320	IMDM320	45.8 (45.7)	45.8 (45.7)	32.1 (36.8)	50.8	22.4 (20.6)				
34	IMM340	—	47.6	42.9	40.5	52.4	22.4				
36	IMM360	IMDM360	50.5 (50.8)	45.8 (46.0)	40.5 (41.3)	57.2	22.4 (22.2)				
39	—	IMDM390	53.8	39.6	36.8	50.8	22.3				
41	—	IMDM410	55.6	40.5	31.8	51.6	22.2				
46	IMM460	—	64.8	47.6	50.3	69.9	29.7				

Dimensions in () apply to 12-point sockets only.

Sets include storage tray

IMDM270 Applications: Use for servicing Inner Rack and Pinion Nuts on BMW® X5® and X6® vehicles**IMDM320 Applications:** Service axle nuts on Mercedes-Benz® W140 chassis 1992–1999 SC and SL Class, Porsche® Boxster®, Cayenne® and 944 plus BMW X3®, X5 and X6 Series 2007 vehicles and later. Other uses include drive shaft nuts on VW® Touareg® vehicles 2003 and later.**IMDM360 Applications:** Use to remove pinion nuts on 2003 GM® and 2004 Dodge® trucks with 11.5 AAM axles. Other used include Duramax® diesel front crankshaft bolts and late model BMW axle shafts.**IMDM390 Applications:** Use on front axle hub of 2007 Toyota® Tundra.**IMDM410 Applications:** For removing and installing the lower ball joint on 2013 to current BMW 5 and 7 series vehicles.