Improved ons

# Genesys™

Programmable DC Power Supplies
750W/1500W in 1U
Built in RS-232 & RS-485 Interface
Advanced Parallel Operation
Optional Interface:
LXI Compliant LAN
IEEE488.2 SCPI (GPIB) Multi-drop
Isolated Analog Programming



Genesys™ Family GenH 750W Half Rack Gen1U 750/1500W Full Rack Gen2U 3.3/5kW

TDK·Lambda

The GenesysTM family of programmable power supplies sets a new standard for flexible, reliable, AC/DC power systems in OEM, Industrial and Laboratory applications.

#### Features include:

- · High Power Density: 1500W in 1U
- Wide Range Input (85 265Vac Continuous, single phase, 47/63Hz)
- Active Power Factor Correction (0.99 typical)
- Output Voltage up to 600V, Current up to 200A
- Built-in RS-232/RS-485 Interface Standard
- Last-Setting Memory
- Global Commands for Serial RS-232/RS-485 Interface
- Front Panel Lock selectable from Front Panel or Software
- High Resolution 16 bit ADCs & DACs
- Reliable Encoders for Voltage and Current Adjustment
- Constant Voltage/Constant Current auto-crossover
- Advanced Parallel reports total current up to four identical units
- Independent Remote ON/OFF and Remote Enable/Disable
- External Analog Programming and Monitoring (user selectable 0-5V & 0-10V)
- Reliable Modular and SMT Design
- 19" Rack Mounted ATE and OEM applications
- Optional Interfaces

Isolated Analog Programming and Monitoring Interface (0-5V/0-10V & 4-20mA) IEEE 488.2 SCPI (GPIB) Multi-Drop

LXI Compliant LAN Interface

- LabWindows® drivers
- Five Year Warranty

Worldwide Safety Agency Approvals; CE Mark for LVD and EMC Regulation





#### **Applications**

Genesys<sup>™</sup> power supplies have been designed to meet the demands of a wide variety of applications.

Common controls are shared all Genesys™ Series.

#### **Test and Measurement**

Last-Setting memory simplifies test design and requires no battery backup.

Built-in RS-232/RS-485 gives maximum system flexibility along with 0-5V and 0-10V, selectable analog programming. Wide range of available inputs allows testing of many different devices.

#### Semiconductor Burn-in

Safe-Start may be ENABLED to re-start at Output OFF to protect load.

Wide range input (85-265Vac) with Active Power Factor correction rides through input transients easily.

#### **Component Test**

High power density, zero stacking and single wire parallel operation give maximum system flexibility.

#### **Laser Diode**

OVP is directly set on Voltage Display, assuring accurate protection settings.

Current Limit Fold Back assures load is protected from current surges.

#### **Heater Supplies**

Smooth, reliable encoders enhance front panel control.

Remote analog programming is user selectable 0-5V or 0-10V.

#### **RF Amplifiers and Magnets**

Robust design assures stable operation under a wide variety of loads.

High linearity in voltage and current mode.

#### **Front Panel Description**



- 1. AC ON/OFF Switch
- 2. Air Intake allows zero stacking for maximum system flexibility and power density.
- 3. Reliable encoder controls Output Voltage and sets Address.
- 4. Volt Display shows Output Voltage and directly displays OVP, UVL and Address settings.
- 5. Reliable encoder controls Output Current, sets baudrate and Advanced Parallel mode.
- 6. Current Display shows Output Current and displays baudrate.
- 7. Function/Status LEDs:
- Alarm
- Foldback Mode
- Fine Control
- Remote Mode
- Preview Settings
- Output On
- 8. Pushbuttons allow flexible user configuration
  - Coarse and Fine adjustment of Output Voltage/Current and Advanced Parallel Master or Slave
  - Preview settings and set Voltage/Current with Output OFF, Front Panel Lockout
  - Set OVP and UVL Limits
  - Set Current Foldback
  - Local/Remote Mode and select Address and Baudrate
  - Output ON/OFF and Auto-Start/Safe-Start Mode

#### **Rear Panel Description**



- 1. Remote/Local Output Voltage Sense Connections.
- 2. DIP Switches select 0-5V or 0-10V Programming and other functions.
- 3. DB25 (Female) connector allows (Non-isolated) Analog Program and Monitor and other functions.
- 4. RS-485 OUT to other Genesys™ Power Supplies.
- 5. RS-232/RS-485 IN Remote Serial Programming.
- 6. Output Connections: Rugged busbars for up to 60V Output; wire clamp connector for Outputs >60V.
- 7. Exit air assures reliable operation when zero stacked.
- 8. Wide-Range Input 85-265VAC continuous, 47/63Hz with Active Power Factor Correction (0.99 typical). AC Input Connector: 750W (IEC320), 1500W (screw terminal-shown).
- 9. Optional Interface Position for IEEE 488.2 SCPI (shown) or Isolated Analog Interface or LAN Interface.

# **Genesys ™ 750W/1500W Specifications**

	•									C:6:		i. Dl.			75014	150011
1.0 MODEL	GEN	6-200	8-180	12.5-120	20-76	30-50	40-38	50-30	60-25					600-2.6		1500W X
1. Rated output voltage (*1)	V	6	8	12.5	20	30	40	50	60	80	100	150	300			X
2. Rated Output Current (*2)	A	200	180	120	76	50	38	30	25	19	15	10	5	2.6		X
3. Rated Output Power 4. Efficiency at 100/200Vac (*3)	- W %	77/79	78/81	1500 82/85	1520 83/86	1500 83/86	1520 84/88	1500 84/88	1500 84/88	1520 84/88	1500 84/88	1500 84/88	1500 84/88	1560 84/88		X
1.0 MODEL															Х	<u> </u>
1. Rated output voltage (*1)	GEN V	6-100	8-90 8	12.5-60 12.5	20-38	30-25 30	40-19 40		60-12.5 60	80-9.5	100-7.5 100	150-5	300-2.5	600-1.3 600	X	
2. Rated Output Current (*2)	À	100	90	60	38	25	19		12.5	9.5	7.5	5	2.5	1.3	X	
3. Rated Output Power	W	600	720	750	760	750	760		750	760	750	750	750	780	X	
4. Efficiency at 100/200Vac (*3)	%	76/78	77/80	81/84	82/85	82/85	83/87		83/87	83/87	83/87	83/87	83/87	83/87	X	
1.1 CONSTANT VOLTAGE MODE																
1. Max.line regulation (0.01% of Vo+ 2mV)(*4) 2. Max load regulation (0.01% of Vo+2mV)(*5)	mV mV	2.6	2.8	3.3	4	5	6	7	8	10 10	12 12	17 17	32 32	62	X	X
3. Ripple and noise p-p 20MHz (*9)	mV	60	50	60	60	50	60	40	60	75	75	75	130	300	X	X
4. Ripple r.m.s 5Hz~1MHz (*9)	mV	8	6	7	7.5	6	7	5	7	7	8	8	20	60	X	X
5. Remote sense compensation/line	V	1	1	1	1	1.5	2	2	3	4	5	5	5	5	X	Х
6. Temp. coefficient	PPM/°		/°C of rat									r Poor T			X	X
7. Temp. stability 8. Up-prog. response time, 0~Vo Rated	mS		<u>of rated</u> N.L/F.L, r			interval	followin	ig 30 mi	nutes wa		<u>Constar</u> N.L/F.L,			mp. 250	X	X
9. Down-prog response time full-load	mS	10		50	IUau		8	30	-	1301113,		50	e ioau	250	X	X
10. Down-prog response time No-load	mS	500	600	700	800		1000	1100			1500	2000	2500		Χ	Х
11. Transient response time (*8)	mS		an 1mSe												X	X
12. Temp. drift	%	0.01%	of rated \	out ove	er 8hrs in	iterval fo	ollowing	30 mini	utes war	m up. Co	onstant	<u>line, loa</u>	d & tem	p	Χ	X
1.2 CONSTANT CURRENT MODE	1	1 10	1 11	0.0	F.0	4.5	2.0		2.25	2.05	2.75	2.5	225	2.12		
1. Max.line regulation (0.01% of lo+ 2mA)(*4) 2. Max.load regulation (0.02% of lo+5mA)(*6)	mA mA	12 25	23	8.0 17	5.8 12.6	4.5 10	3.9 8.8		3.25 7.5	2.95 6.9	2.75 6.5	2.5 6.0	2.25 5.5	2.13 5.26	X	+
3. Ripple r.m.s 5Hz~1MHz . (*7)	mA	190	160	110	50	45	30		15	10	10	8	6	3.20	X	
4. Max.line regulation (0.01% of lo+2mA)(*4)	mA	22	20	14	9.6	7.0	5.8	5	4.5	3.9	3.5	3.0	2.5	2.26		Х
5. Max.load regulation (0.02% of lo+5mA)(*6)	mA	45	41	29	20.2	15	12.6	11	10	8.8	8.0	7.0	6.0	5.52		X
6. Ripple r.m.s 5Hz~1MHz .(*7)	mA DDM/°	350 70000M	300	210	120	ltage fo	65	60	60	40	20	15	15	7	Х	X
7. Temp. coefficient 8. Temp. drift	PPM/°		<u>/°C from</u> of rated \								nstant	line loa	d & tem	n	X	X
9. Warm up drift	%		an 0.1% r												X	X
1.3 PROTECTIVE FUNCTIONS																
1. OCP		0~1059	6 Consta	nt Curre	ent										X	X
2. OCP Foldback		Output	shut do	wn whe	n powei	r supply	change	from CV	to CC. L	Iser sele	ctable.				Χ	X
3. OVP type			r shut-do												X	X
4. OVP trip point 5. Over Temp Protection			/ <u> 0.5~10V</u>  lectable					5~5/V	5~66V	5~88V	5~110V	15~165V	5~33UV	15~66UV	X	X
		1030130	icctabic	iaterice	20111011	iaterica										
1.4 ANALOG PROGRAMMING AND MONITORING  1. Vout Voltage Programming	<u> </u>	0 1000	/ 0 51/		,											
			% ()~5V (	or ()~1()\	/ liser se	alect Ac	curacy a	nd linea	ritv• +/-(	) 5% of r	ated Vo	ut			X	X
2. lout Voltage Programming			<u>%, 0~5V 0</u> %, 0~5V 0							0.5% of r % of rat		ut.			X	X
2. lout Voltage Programming 3. Vout Resistor Programming		0~1009 0~1009	<u>%, 0~5V c</u> %, 0~5/10	or 0~10\ )Kohm f	<u>/, user se</u> full scale	elect. Ac user se	<u>curacy a</u> lect.,Ácc	nd linea uracy ar	<u>rity: +/-1</u> nd linear	% of rate	ed lout. % of rate	ed Vout			X X X	X
Lout Voltage Programming     Vout Resistor Programming     Lout Resistor Programming		0~1009 0~1009 0~1009	%, 0~5V c %, 0~5/10 %, 0~5/10	or 0~10\ )Kohm f )Kohm f	/, user se full scale full scale	lect. Ac user se user se	curacy a lect., Acc lect. Acc	nd linea uracy ar uracy ar	rity: +/-1 nd linear nd linear	% of rate ity: +/-19 ity: +/-1.	ed lout. % of rate 5% of ra	ed Vout	t.			X
2. lout Voltage Programming 3. Vout Resistor Programming 4. lout Resistor Programming 5. On/Off control (rear panel)		0~1009 0~1009 0~1009 By elec	%, 0~5V c %, 0~5/10 %, 0~5/10 trical. Vo	or 0~10\ OKohm f OKohm f Itage: 0	/, user se full scale full scale ~0.6V/2	elect. Ac user se user se ~15V, or	curacy a lect., Acc lect. Acc dry cont	nd linea uracy ar uracy ar	rity: +/-1 nd linear nd linear	% of rate ity: +/-19 ity: +/-1.	ed lout. % of rate 5% of ra	ed Vout	t.			X X X
2. lout Voltage Programming 3. Vout Resistor Programming 4. lout Resistor Programming 5. On/Off control (rear panel) 6. Output Current monitor 7. Output Voltage monitor		0~1009 0~1009 0~1009 By elect 0~5V o	%, 0~5V ( %, 0~5/10 %, 0~5/10 trical. Vo r 0~10V, r 0~10V,	or 0~10\ OKohm f OKohm f Itage: 0 accurac accurac	/, user se full scale full scale ~0.6V/2 y: 1%, us y: 1%, us	elect. Ac ,user se ,user se ~15V, or ser selec ser selec	curacy a lect.,Acc lect. Acc dry cont table table	nd linea uracy ar uracy ar tact, use	rity: +/-1 nd linear nd linear	% of rate ity: +/-19 ity: +/-1.	ed lout. % of rate 5% of ra	ed Vout	t.			X X X X
2. lout Voltage Programming 3. Vout Resistor Programming 4. lout Resistor Programming 5. On/Off control (rear panel) 6. Output Current monitor 7. Output Voltage monitor 8. Power Supply OK signal		0~1009 0~1009 0~1009 By elec 0~5V o 0~5V o	%, 0~5V ( %, 0~5/10 %, 0~5/10 trical. Vo r 0~10V, r 0~10V, th (4~5V)	or 0~10V OKohm f OKohm f Itage: 0 accurac accurac -OK, 0V	/, user se full scale full scale ~0.6V/2 y: 1%, us y: 1%, us /-Fail 500	elect. Ac e,user se e,user se ~15V, or ser selec ser selec Oohm se	curacy a lect., Acc lect. Acc dry con table table eries resi	nd linea uracy ar uracy ar tact, use stance	rity: +/-1 nd linear nd linear r selecta	% of rate ity: +/-19 ity: +/-1. able logi	ed lout. % of rate 5% of ra c	ed Vout ited lou	t.		X X X X X	X X X X X
2. lout Voltage Programming 3. Vout Resistor Programming 4. lout Resistor Programming 5. On/Off control (rear panel) 6. Output Current monitor 7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator		0~1009 0~1009 0~1009 By elec 0~5V o 0~5V o TTL hic	%, 0~5V ( %, 0~5/10 %, 0~5/10 trical. Vo r 0~10V, r 0~10V, gh (4~5V) collector,	or 0~10V OKohm f OKohm f Itage: 0- accurac accurac I-OK, 0V CC mod	/, user se full scale full scale ~0.6V/2- y: 1%, us y: 1%, us /-Fail 500 de: On, C	elect. Ac e,user sel ~15V, or ser select ser select 00hm select V mode	curacy a lect., Acc lect. Acc dry con table table eries resi : Off, Ma	nd linea curacy ar uracy ar tact, use stance eximum	rity: +/-1 nd linear nd linear r selecta	% of ratity: +/-19 ity: +/-1. able logi	ed lout. % of rate 5% of ra c	ed Vout ited lou	t.	mA	X X X X X X	X X X X X X
2. lout Voltage Programming 3. Vout Resistor Programming 4. lout Resistor Programming 5. On/Off control (rear panel) 6. Output Current monitor 7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable		0~1009 0~1009 0~1009 By elec 0~5V o 0~5V o TTL hig Open c	%, 0~5V c %, 0~5/10 %, 0~5/10 trical. Vo r 0~10V, r 0~10V, gh (4~5V) collector, ntact. Op	or 0~10V OKohm f OKohm f Itage: 0 accurac accurac -OK, 0V CC mod en: off,	/, user se full scale full scale ~0.6V/2- y: 1%, us y: 1%, us /-Fail 50 de: On, C Short: o	elect. Ac euser se euser se ~15V, or ser select ser select 00hm se V mode n. Max. v	curacy a lect., Acc lect. Acc dry conf table table ries resi : Off, Ma voltage a	nd linea uracy ar uracy ar tact, use stance eximum	rity: +/-1 nd linear nd linear r selecta voltage:	% of rate ity: +/-19 ity: +/-1. able logi 30V, mae in: 6V	ed lout. % of rate 5% of ra c	ed Vout ted lou sink cur	t.	mA	X X X X X	X X X X X
2. lout Voltage Programming 3. Vout Resistor Programming 4. lout Resistor Programming 5. On/Off control (rear panel) 6. Output Current monitor 7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator		0~1009 0~1009 0~1009 By elec 0~5V o 0~5V o TTL hic Open c Dry cor By elec	%, 0~5V ( %, 0~5/10 %, 0~5/10 trical. Vo r 0~10V, r 0~10V, gh (4~5V) collector,	or 0~10V OKohm f OKohm f Itage: 0- accurac accurac I-OK, 0V CC mod en: off, ! nal or O	/, user se full scale full scale ~0.6V/2- y: 1%, us y: 1%, us /-Fail 50 de: On, C Short: on	elect. Ac euser se euser se ~15V, or ser select ser select oohm se V mode n. Max. vort: 0~0.	curacy a lect., Acc lect. Acc dry conf table table eries resi : Off, Ma voltage a 6V or sh	nd linea uracy ar uracy ar tact, use stance ximum at Enable ort: Rem	rity: +/-1 nd linear nd linear r selecta voltage: e/Disabl note, 2~1	% of rate ity: +/-19 ity: +/-1. able logi 30V, mae in: 6V 5V or op	ed lout. % of rate 5% of ra c ximum s	ed Vout ted lou sink cur al.	t. rent: 10r	mA	X X X X X X	X X X X X X X
2. lout Voltage Programming 3. Vout Resistor Programming 4. lout Resistor Programming 5. On/Off control (rear panel) 6. Output Current monitor 7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control		0~1009 0~1009 0~1009 By elec 0~5V o 0~5V o TTL hic Open c Dry cor By elec Open c	%, 0~5V c %, 0~5/10 %, 0~5/10 trical. Vo r 0~10V, r 0~10V, jh (4~5V) collector, ntact. Op trical sig	or 0~10\DKohm f OKohm f OKohm f Itage: 0- accurac accurac OK, 0\DCC mod en: off, 1 nal or O Local: C	/, user se full scale full scale ~0.6V/2- y: 1%, us y: 1%, us /-Fail 500 de: On, C Short: of pen/Sho Open, Re	elect. Ac elect. Ac	curacy a lectAcc lect. Acc dry cont table table ries resi : Off, Ma voltage a 6V or sh n. Maxir	nd linea curacy ar uracy ar tact, use stance eximum at Enable ort: Rem num vol	rity: +/-1 nd linear nd linear r selecta voltage: e/Disabl note, 2~1 tage: 30	% of rate ity: +/-10 ity: +/-1. able logi  30V, ma e in: 6V 5V or op V, maxin	ed lout. % of rate 5% of ra c ximum s oen: Loc num sin	ed Vout. ited lou sink cur al. k currer	t. rent: 10r	mA	X X X X X X X X	X X X X X X X X
2. lout Voltage Programming 3. Vout Resistor Programming 4. lout Resistor Programming 5. On/Off control (rear panel) 6. Output Current monitor 7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator		0~1009 0~1009 0~1009 By elect 0~5V to TTL hick Open co By elect Open co Wout/lo	%, 0~5V c %, 0~5/10 %, 0~5/10 %, 0~5/10 trical. Vo r 0~10V, r 0~10V, yh (4~5V) collector, ntact. Op trical sig collector,	or 0~10V OKohm f OKohm f Itage: 0- accurac accurac -OK, 0V CC mod en: off, i nal or O Local: C	/, user sefull scale full scale full scale ~0.6V/2 y: 1%, us y: 1%, us /-Fail 50 de: On, C Short: o pen/Sho pen, Re	elect. Ac user sel user sel user sel user select ser select 00hm	curacy a lectAcc lect. Acc dry cont table table eries resi : Off, Ma /oltage a 6V or sh n. Maxir	nd linea uracy ar uracy ar tact, use stance ximum at Enable ort: Rem num vol	rity: +/-1 nd linear nd linear r selecta voltage: e/Disabl note, 2~1 tage: 30	% of rate ity: +/-10 ity: +/-1. able logi  30V, ma e in: 6V 5V or op V, maxin	ed lout. % of rate 5% of ra c ximum s oen: Loc num sin	ed Vout. ited lou sink cur al. k currer	t. rent: 10r	mA	X X X X X X X X X	X X X X X X X X X
2. lout Voltage Programming 3. Vout Resistor Programming 4. lout Resistor Programming 5. On/Off control (rear panel) 6. Output Current monitor 7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL		0~1009 0~1009 0~1009 By elec 0~5V o 0~5V o TTL hig Open o Dry cor By elec Open o	%, 0~5V c/s, 0~5V c/s, 0~5V c/s, 0~5/10/s, 0~5/10/s, 0~5/10 trical. Vor 0~10V, r 0~10V, r 10 (4~5V) collector, ollector, out act. Op trical sign collector, but manu/L manu/L manu	or 0~10\) DKohm f DKOh DKOH DKOH DKOH DKOH DKOH DKOH DKOH DKOH	/, user se full scale	elect. Ac yuser se yuser se ~15V, or ser select ser select Oohm se V mode n. Max. v ort: 0~0. mote: O	curacy a lectAcc lect. Acc dry cont table tries resi : Off, Ma voltage a 6V or sh n. Maxir	nd linea uracy ar uracy ar tact, use stance eximum at Enable ort: Rem num vol	rity: +/-1 nd linear nd linear r selecta  voltage: e/Disabl note, 2~1 tage: 30	% of ratity: +/-19 ity: +/-1. ity: +/-1. able logi  30V, ma e in: 6V 5V or op V, maxin adjustm	ed lout. % of rate 5% of ra c  ximum s pen: Loc num sin	ed Vout. ted lou sink cur al. k currer	rent: 10r		X X X X X X X X X	X X X X X X X X X X
2. lout Voltage Programming 3. Vout Resistor Programming 4. lout Resistor Programming 5. On/Off control (rear panel) 6. Output Current monitor 7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator		0~100° 0~100° 0~100° By elec 0~5V o 0~5V o TTL hic Open c Dry coi By elec Open c	%, 0~5V c/ %, 0~5/10/ %, 0~5/10/ trical. Vo r 0~10V, r 0~10V, yh (4~5V) ollector, ttact. Op trical sig ollector, but manu VL manu	or 0~10\)	/, user se full scale full scale ~0.6V/2 y: 1%, us y: 1%, us /-Fail 50 de: On, C Short: o pen, Sho Open, Re st by sep t by Volt ff, Re-sta	elect. Ac yuser sel yuser sel 15V, or ser selectooloon selectooloon yumaali yu	curacy a lect., Acc lect. Acc dry cont table table eries resi : Off, Ma voltage a 6V or sh n. Maxir ncoders ( encoders)	nd linea uracy ar uracy ar tact, use stance xximum at Enable ort: Rem num vol	rity: +/-1 nd linear nd linear r selecta  voltage: e/Disabl note, 2~1 tage: 30	% of rate ity: +/-1(ity: +/-1, ity: +/-1, able logions of the logi	ed lout. % of rate 5% of ra c  ximum s pen: Loc num sin ent sele	ed Vout. ted lou sink cur al. k currer ctable)	rent: 10r		X X X X X X X X X	X X X X X X X X X
2. lout Voltage Programming 3. Vout Resistor Programming 4. lout Resistor Programming 5. On/Off control (rear panel) 6. Output Current monitor 7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL		0~100° 0~100° 0~100° 0~100° By elec 0~5V o 0~5V o TTL hic Open c Open c Vout/kc OVP/U AC on/Addres RS232/	%, 0~5V c/k, 0~5V c/k, 0~5V c/k, 0~5/10/k, 0~5/10/k, 0~5/10/k, 0~5/10/k, 0~6/10V, r 0~10V, r 0~10V, r 0~10V, ollector, ollector, ollector, out manu VL manu off, 0utps s selectii	or 0~10V DKOhm f DKOhm f Itage: 0 accurac accurac -OK, 0V CC moden: off, in nal or O Local: C mal adjust ut on/of on by Vo EEEE488	/, user se full scale full scale ~0.6V/2 y: 1%, us /-Fail 50 de: On, C Short: o pen/Sho ppen, Re st by sep t by Volt ff, Re-sta oltage (o2	elect. Ac Luser select. Luser sele	curacy a lect. Acc lect. Acc lect. Acc dry con table table tries resi Off, Ma yoltage a 6V or sh n. Maxir lecoders ( lectoders) the discoders ( lectoders)	nd linea uracy ar tact, use stance stance stance tat Enable ort: Ren num vol (coarse a (safe), Fo encode encode switce	rity: +/-1 nd linear nd linear r selecta  voltage: e/Disabl note, 2~1 tage: 30 and fine oldback or. Numb	% of rate ity: +/-1s ity: +/-1. ity: +/-1. able logi  30V, ma e in: 6V 5V or op V, maxin  adjustm  control (i	ed lout. % of rate 5% of rac c  ximum: pen: Loc num sin ent sele CV to CC dresses:	ed Vout. ted lou sink cur al. k currer ctable)	rent: 10r		X X X X X X X X X X X	X X X X X X X X X X X X X X
2. lout Voltage Programming 3. Vout Resistor Programming 4. lout Resistor Programming 5. On/Off control (rear panel) 6. Output Current monitor 7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL		0~1009 0~1009 0~1009 By elec 0~5V o 0~5V o TTL hig Open c Dry con By elec Open c Vout/Ic OVP/U AC on/ Addres RS232/ Baudra	%, 0~5V (%, 0~5V (%, 0~5/10) (%, 0~5/10) (%, 0~5/10) (trical. Vo r 0~10V, r 0~10V, r 0~10V, ollector, ntact. Optrical significant of the collector, out manually L ma	or 0~10V DKOhm f DKOhm	/, user se full scale full scale ~0.60/2 y: 1%, us /-Fail 50/ de: On, C Short: on pen/Sh Dpen, Re st by sep t by Volt ff, Re-sta bltage (o 2 select 0, 2400,	elect. Ac Luser se Luser se Luser se Luser select Ser select Solution select Solution select Domain Max. No Domain Select Domain Max. No Domain Select Domain Max. No Domain Max.	curacy a lectAcc lect. Acc dry contable table table eries resi coff, Mayorltage a 6V or sh n. Maxir encoders leencoders (auto, t) adjust EEE enab 600 and	nd linea uracy ar tact, use stance stance stance tat Enable ort: Ren num vol (coarse a (safe), Fo encode encode switce	rity: +/-1 nd linear nd linear r selecta  voltage: e/Disabl note, 2~1 tage: 30 and fine oldback or. Numb	% of rate ity: +/-1s ity: +/-1. ity: +/-1. able logi  30V, ma e in: 6V 5V or op V, maxin  adjustm  control (i	ed lout. % of rate 5% of rac c  ximum: pen: Loc num sin ent sele CV to CC dresses:	ed Vout. ted lou sink cur al. k currer ctable)	rent: 10r		X X X X X X X X X X X X	X X X X X X X X X X X X X X X X X X X
2. lout Voltage Programming 3. Vout Resistor Programming 4. lout Resistor Programming 5. On/Off control (rear panel) 6. Output Current monitor 7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL		0~1009 0~1009 0~1009 By elec 0~5V o 0~5V o TTL hig Open c Open c Oyen c Vout/Ic OVP/U AC on// Addres RS232/ Baudra	%, 0~5V (%, 0~5V (%, 0~5V (%, 0~5/10) (%, 0~5/10) (%, 0~5/10) (%, 0~10V, r 0~10V, r 0~10V, r 10~10V, r 10~	or 0~10V Nohm f	/, user sectul scale full scale f	elect. Ac ,user sel ~15V, or ser selec Ser selec Sohm se V mode n. Max. v. ort: 0~0. mote: O	curacy a lect. According to the lect. Accordi	nd linea uracy ar tact, use stance stance stance tat Enable ort: Ren num vol (coarse a r safe), Fo encode el eswitce	rity: +/-1 nd linear nd linear r selecta  voltage: e/Disabl note, 2~1 tage: 30 and fine oldback or. Numb	% of rate ity: +/-1s ity: +/-1. ity: +/-1. able logi  30V, ma e in: 6V 5V or op V, maxin  adjustm  control (i	ed lout. % of rate 5% of rac c  ximum: pen: Loc num sin ent sele CV to CC dresses:	ed Vout. ted lou sink cur al. k currer ctable)	rent: 10r		X X X X X X X X X X X	X X X X X X X X X X X X X X
2. lout Voltage Programming 3. Vout Resistor Programming 4. lout Resistor Programming 5. On/Off control (rear panel) 6. Output Current monitor 7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL 1. Control functions		0~1009 0~1009 0~1009 By elec 0~5V o 0~5V o TTL hig Open c Open c Over of the control of the cont	%, 0~5V (%, 0~5V (%, 0~5/10) (%, 0~5/10) (%, 0~5/10) (trical. Vo r 0~10V, r 0~10V, r 0~10V, ollector, ntact. Optrical significant of the collector, out manually L ma	or 0~10V Kohm f Kohm f Itage: 0 accurac accurac -OK, 0V CC mod en: off, nal or O Local: C  alal adjus alal adjus ut on/ol on by Vo IEEE488 ion: 120 accurac	/, user secul scale will will will will will will will wi	elect. Ac ,user select. ~15V, or ser select. Ser select. Oohm selec	curacy a ect. Accelect. Ac	nd linea uracy ar uracy ar tact, use stance ximum val et Enable ort: Rem num vol (coarse a r safe), Fo t encode ole switce 19,200	rity: +/-1 nd linear nd linear r selecta  voltage: e/Disabl note, 2~1 tage: 30  and fine  lidback or. Numb h and D	% of ratity: +/-15 ity: -/-15 ity	ed lout. % of rate 5% of rac c  ximum: pen: Loc num sin ent sele CV to CC dresses:	ed Vout. ted lou sink cur al. k currer ctable) C), Go to	rent: 10r		X X X X X X X X X X X X X X X X X X X	X
2. lout Voltage Programming 3. Vout Resistor Programming 4. lout Resistor Programming 5. On/Off control (rear panel) 6. Output Current monitor 7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL  1. Control functions	LANIn	0~1009 0~1009 0~1009 By elec 0~5V o 0~5V o 0~5V o TTL hig Open c Dry coi By elec Open c Vout/Ic OVP/U AC on/ Addres RS232/ Baudra Voltage Curren Voltage	%, 0~5V (%, 0~5V) (%, 0~5/10)	or 0~10V Kohm f Kohm f Itage: 0 accurac accurac -OK, 0V CC mod en: off, nal or O Local: C  alal adjus alal adjus ut on/ol on by Vo IEEE488 ion: 120 accurac	/, user secul scale will will will will will will will wi	elect. Ac ,user select. ~15V, or ser select. Ser select. Oohm selec	curacy a ect. Accelect. Ac	nd linea uracy ar uracy ar tact, use stance ximum val et Enable ort: Rem num vol (coarse a r safe), Fo t encode ole switce 19,200	rity: +/-1 nd linear nd linear r selecta  voltage: e/Disabl note, 2~1 tage: 30  and fine  lidback or. Numb h and D	% of ratity: +/-15 ity: -/-15 ity	ed lout. % of rate 5% of rac c  ximum: pen: Loc num sin ent sele CV to CC dresses:	ed Vout. ted lou sink cur al. k currer ctable) C), Go to	rent: 10r		X X X X X X X X X X X X X X X X X X X	X X X X X X X X X X X X X X X X X X X
2. lout Voltage Programming 3. Vout Resistor Programming 4. lout Resistor Programming 5. On/Off control (rear panel) 6. Output Current monitor 7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL  1. Control functions  2. Display 3. Indications	LAN In	0~1009 0~1009 0~1009 By elec 0~5V o 0~5V o 0~5V o TTL hig Open c Dry coi By elec Open c Vout/Ic OVP/U AC on/ Addres RS232/ Baudra Voltage Curren Voltage	%, 0~5V (%, 0~5V) (%, 0~5/10)	or 0~10V Kohm f Kohm f Itage: 0 accurac accurac -OK, 0V CC mod en: off, nal or O Local: C  alal adjus alal adjus ut on/ol on by Vo IEEE488 ion: 120 accurac	/, user secul scale will will will will will will will wi	elect. Ac ,user select. ~15V, or ser select. Ser select. Oohm selec	curacy a lect. Accelet. Accele	nd linea uracy ar uracy ar tact, use stance ximum val et Enable ort: Rem num vol (coarse a r safe), Fo t encode ole switce 19,200	rity: +/-1 nd linear nd linear r selecta  voltage: e/Disabl note, 2~1 tage: 30  and fine  lidback or. Numb h and D	% of ratity: +/-15 ity: +/-15 ity: +/-15 ity: +/-1. able logi 30V, mae in: 6V 5V or op V, maxin adjustm control (der of add IP switch	ed lout. % of rate 5% of rac c  ximum: pen: Loc num sin ent sele CV to CC dresses:	ed Vout. ted lou sink cur al. k currer ctable) C), Go to	rent: 10r		X X X X X X X X X X X X X X X X X X X	X
2. lout Voltage Programming 3. Vout Resistor Programming 4. lout Resistor Programming 5. On/Off control (rear panel) 6. Output Voltage monitor 7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL 1. Control functions 2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB / Model 1. Remote Voltage Programming (16 bit)		0~1009 0~1009 0~1009 0~1009 By elec 0~5V o 0~5V o TTL hic Open c Dry col By elec Open c Open c OyP/U AC on/Addres R5232/ Baudra Voltage Curren Voltage terface 6	%, 0~5V (%, 0~5/10) %, 0~5/10) %, 0~5/10) %, 0~5/10 trical. Vor r 0~10V. r	or 0~10v KKohm f JKohm f JKohm f Itage: 0 accurac accurac -OK, 0v CC mod en: off, nal or 0 Local: C ital adjust ut on/ol on by Vc IEEE488 ion: 120 accura accura t, Alarm	/, user set full scale vull scale vull scale vull scale vull scale vull scale vull scale ~0.6V/2. y: 1%, us y: 1%, u	elect. Ac ,user select ~15V, or ser select 00hm select 00hm select 00hm select 10hm selec	curacy a lectAcc lectAcc lectAcc dry cont table table tries resi : Off, Ma voltage a 6V or sh n. Maxir lecoders lencoders es (auto, t) adjust EEE enal 500 and lunt int loldback   40	nd linea uracy ar uracy ar tact, use stance eximum at Enable ort: Rem num vol (coarse a safe), Fc encode ole switc 19,200	rity: +/-I rity: +/-I inear id linear id linear r selecta  voltage: e/Disabl iote, 2~-I tage: 30  and fine bldback or, Numb h and D  Output (	% of ratify: +/-10 ity: +/-10 ity	ed lout. % of rate 55% of rac c  ximum : ben: Loc hum sin ent sele CV to CC dresses: h  t Panel	ed Vout. ited lou sink cur al. k currer ctable) C), Go to 31	rent: 10r	ontrol	X X X X X X X X X X X X X X X X X X X	X X X X X X X X X X X X X X X X X X X
2. lout Voltage Programming 3. Vout Resistor Programming 4. lout Resistor Programming 5. On/Off control (rear panel) 6. Output Current monitor 7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL 1. Control functions 2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB / Model 1. Remote Voltage Programming (16 bit) Resolution (0.02% of Vo Rated)	V mV	0~1009 0~1009 0~1009 0~1009 By elec 0~5V o 0~5V o 0~5V o TTL hic Open c Open c Open c Vout/Ic OVP/U AC on// Addres RS232/ Baudra Voltage Curren Voltage terface 6	%, 0~5V c/ %, 0~5/10/ %, 0~5/11/ %, 0~5/11/ %, 0~5/11/ %, 0~5/11/ trical. Vo r 0~10V, r	or 0~10vb Kohm f Kohm f Itage: 0 accurac accurac -OK, 0V CC mod en: off,; nal or O Local: C lal adjust ut on/ol on by Vo IEEE488 ion: 120 accurac t, Alarm	/, user sections of the control of t	elect. Ac., user selects. Ac., u	curacy a lectAcc lectAcc lectAcc deect. Acc dry contrable table tries resi : Off, Ma voltage a 6V or sh n. Maxir accoders (auto, t) adjust EEE enab 500 and unt lect accode lect according to the following series (auto, t) adjust EEE enab 500 and unt lect according to the following series (auto, t) adjust EEE enab 500 and unt lect according to the following series (auto, t) adjust EEE enab 500 and unt lect according to the following series (auto, t) adjust EEE enab 500 and unt lect according to the following series (auto, t) adjust the following series (auto, t) and the following series (auto, t) are series (auto, t) and the following series (auto, t) and the follow	nd linea uracy ar uracy ar tact, use stance stance ximum vol (coarse a safe), Fo safe), Fo safe), Fo solution (19,200	rity: +/-1 d linear d linear d linear r selecta  voltage: e/Disabl lote, 2~1 tage: 30 and fine eldback or r. Numb h and D  Output (	% of ratify: +/-10 ity: +/-11 ity: +/-12 ity: +/-13 ity	ed lout. % of rate 5 % of rate 5 % of rate c  ximum: pen: Loc num sin ent sele CV to CC dresses: 1  100  2.0	sink cur al. k currer ctable) C), Go to 31	rent: 10r nt: 5mA.	600	X X X X X X X X X X X X X X X X X X X	X X X X X X X X X X X X X X X X X X X
2. lout Voltage Programming 3. Vout Resistor Programming 4. lout Resistor Programming 5. On/Off control (rear panel) 6. Output Current monitor 7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1. 5 FRONT PANEL 1. Control functions 2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB / Model 1. Remote Voltage Programming (16 bit) Resolution (0.02% of Vo Rated) Accuracy 0.05%Vo Rated Output Voltage (*11)	V	0~1009 0~1009 0~1009 0~1009 By elec 0~5V o 0~5V o TTL hic Open c Dry col By elec Open c Open c OyP/U AC on/Addres R5232/ Baudra Voltage Curren Voltage terface 6	%, 0~5V (%, 0~5/10) %, 0~5/10) %, 0~5/10) %, 0~5/10 trical. Vor r 0~10V. r	or 0~10v KKohm f JKohm f JKohm f Itage: 0 accurac accurac -OK, 0v CC mod en: off, nal or 0 Local: C ital adjust ut on/ol on by Vc IEEE488 ion: 120 accura accura t, Alarm	/, user set full scale vull scale vull scale vull scale vull scale vull scale ~0.6V/2. y: 1%, us	elect. Ac Luser se Luser se ~15V, or ser selecter Cohm se V mode n. Max. v ort: 0~0. mote: O	curacy a lectAcc lectAcc lectAcc dry cont table table tries resi : Off, Ma voltage a 6V or sh n. Maxir lecoders lencoders es (auto, t) adjust EEE enal 500 and lunt int loldback   40	nd linea uracy ar uracy ar tact, use stance eximum at Enable ort: Rem num vol (coarse a safe), Fc encode ole switc 19,200	rity: +/-I rity: +/-I inear id linear id linear r selecta  voltage: e/Disabl iote, 2~-I tage: 30  and fine bldback or, Numb h and D  Output (	% of ratify: +/-10 ity: +/-10 ity	ed lout. % of rate 55% of rac c  ximum : ben: Loc hum sin ent sele CV to CC dresses: h  t Panel	ed Vout. ited lou sink cur al. k currer ctable) C), Go to 31	rent: 10r	ontrol	X X X X X X X X X X X X X X X X X X X	X X X X X X X X X X X X X X X X X X X
2. lout Voltage Programming 3. Vout Resistor Programming 4. lout Resistor Programming 5. On/Off control (rear panel) 6. Output Current monitor 7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL 1. Control functions 2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB / Model 1. Remote Voltage Programming (16 bit) Resolution (0.02% of Vo Rated) Accuracy 0.05%Vo Rated Output Voltage (*11) 2. Remote Current Programming (16 bit)	MV mV	0~1009 0~1009 0~1009 0~1009 By elec 0~5V o 0~5V o 0~5V o 0~5V o Dry coi By elec Open c Vout/Ic OVP/U Addres RS232/ Baudra Voltage Curren Voltage terface 0.12 3.0	%, 0~5V c/6, 0~5V c/6, 0~5/10/6, 0~	or O-100 Kohm fi Nordon Month of Nordon Month	/, user set full scale will scale a constant of the scale will sca	elect. Ac Luser selecters and selecters selecters selecters selecters selecters selecters selecters and selecters and selecters selecters selecters and selecters selecters and selecters and selecters and selecters selecters and selecters selecter	curacy a lectAcc lectAcc lectAcc lectAcc dry control table table table leries resi : Off. Ma loltage a 6V or sh n. Maxir lecoders lencoders (encoders so (auto, o. t) adjust EEE enab (500 and bunt lint lecode)   40   0.8   20	nd linear uracy ar uracy ar tact, use stance eximum at Enable ort: Remum vol (coarse a safe), For encode ole switc 19,200 c, Local, 50	voltage: vol	% of ratifity: +/-10 ity: +/-10 i	ded lout. % of rate 5% of rate 5% of rate c c c c c c def very c c def very c c def very c c def very def	ed Vout ted lou al. k currer ctable)  150  3.0  75	rent: 10r ht: 5mA. local cc	600 12.0 300	X	X X X X X X X X X X X X X X X X X X X
2. lout Voltage Programming 3. Vout Resistor Programming 4. lout Resistor Programming 5. On/Off control (rear panel) 6. Output Voltage monitor 7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL 1. Control functions  2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB / Model 1. Remote Voltage Programming (16 bit) Resolution (0.02% of Vo Rated) Accuracy 0.05%Vo Rated Output Voltage (*11) 2. Remote Current Programming (16 bit) Resolution (0.002% of lo Rated) Resolution (0.002% of lo Rated)	W mV mA	0~1009 0~1009 0~1009 0~1009 By elec 0~5V o 0~5V o TTL hic Open c Dry col By elec Open c Open c Vout/k OVP/U AC on/Addres R5232/ Baudra Voltage Curren Voltage terface 0.12 3.0	%, 0~5V c/6, 0~	or O-100 Kohm fi Hage: 0 Kohm	/, user set juli scale will scale a constant of the scale will scale a constant of the scale will s	Lect. Ac. Luser sel. Luser sel. Luser sel. Luser sel. Luser selectoon ser selectoon se	curacy a lectAcc lectAcc lectAcc devenue for a lectAcc dry control table table tries resi coff, Maximum for a lectAcc dry control table tries resi coff, Maximum for a lectAcc dry control table tries (auto, t) adjust EEE enals 600 and bunt int foldback dry control table for a lectAcc dry control table for a le	nd linea uracy ar uracy ar tact, use stance ximum at Enable ort: Rem num vol (coarse a safe), Fo encode ole switc 19,200	voltage: e/Disabl lote, 2~1 tage: 30 and fine oldback or, Numb h and D  Output (  1.2 30  0.25	% of ratifity: +/-10: ity: +/-10: ity: +/-10: ity: +/-10: ity: +/-10: adouble logi  30V, mae in: 6V 5V or op V, maxin adjustm control (fer of add) P switch  On, Fron  80  1.6 40	ed lout.  k of rate 5% of rate 5% of rate c  c  central control central contro	ed Vout ted lou sink currer ctable)  Lock 150 3.0 75	rent: 10r nt: 5mA.    300	600 12.0 300	X	X X X X X X X X X X X X X X X X X X X
2. lout Voltage Programming 3. Vout Resistor Programming 4. lout Resistor Programming 5. On/Off control (rear panel) 6. Output Current monitor 7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL  1. Control functions  2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB / Model 1. Remote Voltage Programming (16 bit) Resolution (0.02% of Vo Rated) Accuracy 0.05%Vo Rated Output Voltage (*11) 2. Remote Current Programming (16 bit) Resolution (0.002% of lo Rated) Resolution (0.002% of lo Rated) Resolution (0.002% of lo Rated)	MV mV mA) mA	0~1009 0~1009 0~1009 0~1009 0~1009 By elec 0~5V o 0~5V o 0~5V o TTL hic Open c Open c Open c Vout/Ic OVP/U AC on// Addres RS232/ Baudra Voltage Curren Voltage 1 0.12 3.0 2.00 200	%, 0~5V c/6, 0~5V c/6, 0~5V c/6, 0~5/10 c	or 0-100 Kohm fi Nager 0 Kohm	/, user section of the control of th	elect. Ac. Luser sel Luser	curacy a lectAcc lectAcc lectAcc lectAcc dry contrable table ries resi : Off, Ma voltage a 6V or sh n. Maxir encoders (encoders (auto, t) adjust EEE enalt 500 and sunt lector and	nd linear uracy ar uracy ar tact, use stance eximum eat Enable ort: Rem num vol (coarse ar safe), For encode ble switce 19,200	voltage:  voltag	% of ratify: +/-10 ity: +/-11 ity: +/-12 ity: +/-13 ity	ed lout.  % of rate 59% of rate 59% of rate c  c  c  ent sele CCV to CC dresses: 1  100  2.0  50  0.15	150	rent: 10r nt: 5mA.    300     6.0     150     0.05     5.0	600 12.0 300 0.03 2.6	X	X
2. lout Voltage Programming 3. Vout Resistor Programming 4. lout Resistor Programming 5. On/Off control (rear panel) 6. Output Voltage monitor 7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL 1. Control functions  2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB / Model 1. Remote Voltage Programming (16 bit) Resolution (0.02% of Vo Rated) Accuracy 0.05%Vo Rated Output Voltage (*11) 2. Remote Current Programming (16 bit) Resolution (0.002% of lo Rated) Resolution (0.002% of lo Rated)	mV mV mA ) mA mA	0~1009 0~1009 0~1009 0~1009 By elec 0~5V o 0~5V o TTL hic Open c Dry col By elec Open c Open c Vout/k OVP/U AC on/Addres R5232/ Baudra Voltage Curren Voltage terface 0.12 3.0	%, 0~5V c/6, 0~	or O-100 Kohm fi Hage: 0 Kohm	/, user set juli scale will scale a constant of the scale will scale a constant of the scale will s	Lect. Ac. Luser sel. Luser sel. Luser sel. Luser sel. Luser selectoon ser selectoon se	curacy a lectAcc lectAcc lectAcc devenue for a lectAcc dry control table table tries resi coff, Maximum for a lectAcc dry control table tries resi coff, Maximum for a lectAcc dry control table tries (auto, t) adjust EEE enals 600 and bunt int foldback dry control table for a lectAcc dry control table for a le	nd linea uracy ar uracy ar tact, use stance ximum at Enable ort: Rem num vol (coarse a safe), Fo encode ole switc 19,200	voltage: e/Disabl lote, 2~1 tage: 30 and fine oldback or, Numb h and D  Output (  1.2 30  0.25	% of ratifity: +/-10: ity: +/-10: ity: +/-10: ity: +/-10: ity: +/-10: adouble logi  30V, mae in: 6V 5V or op V, maxin adjustm control (fer of add) P switch  On, Fron  80  1.6 40	ed lout.  k of rate 5% of rate 5% of rate c  c  central control central contro	ed Vout ted lou sink currer ctable)  Lock 150 3.0 75	rent: 10r nt: 5mA.    300	600 12.0 300	X	X X X X X X X X X X X X X X X X X X X
2. lout Voltage Programming 3. Vout Resistor Programming 4. lout Resistor Programming 5. On/Off control (rear panel) 6. Output Current monitor 7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control 13. Local/Remote analog control indicator 1.5 FRONT PANEL  1. Control functions  2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB / Model 1. Remote Voltage Programming (16 bit) Resolution (0.02% of Vo Rated) Accuracy 0.05%Vo Rated Output Voltage (*11) 2. Remote Current Programming (16 bit) Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated-0.1% of lo Actual Output)(*10) Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated+0.1% of lo Actual Output)(*10) Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated+0.1% of lo Actual Output)(*10) Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated+0.1% of lo Actual Output)(*10) Resolution (0.002% of lo Rated)	mV mV mA ) mA mA	0~1009 0~1009 0~1009 0~1009 0~1009 By elec 0~5V o 0	%, 0~5V c %, 0~5V10 %, 0~5/10 %, 0~5/10 %, 0~5/10 trical. Vo r 0~10V, r 0~1	or O-100 Kehm fr Kohm	/, user set full scale vall scale	elect. Ac Luser selecters	curacy a lectAcc lectAcc lectAcc lectAcc development of the lect. Acc dry control table table leries resi : Off. Ma voltage a 6V or sh n. Maxir lecoders lencoders (auto, t) adjust EEE enable 500 and ount lect	nd lineaduracy are uracy are tract, used stance eximum at Enable ort: Remum vol (coarse a safe), For encode ole switch 19,200	voltage: 2/Oisabl note, 2~1 tage: 30  output 0  0utput 0  0.25 25 0.50	% of ratifity: +/-10 ity: +/-11 ity: +/-12 ity: +/-13 i	ed lout.  % of rate 5% of rate 5% of rate 5% of rate 5% of rate 100 100 100 100 100 100 100 100 100 10	150	300   6.0   150   5.0   0.10	600   12.0   300   0.03   2.6   0.05	X	X
2. lout Voltage Programming 3. Vout Resistor Programming 4. lout Resistor Programming 5. On/Off control (rear panel) 6. Output Voltage monitor 7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL 1. Control functions  2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB / Model 1. Remote Voltage Programming (16 bit) Resolution (0.02% of Vo Rated) Accuracy 0.05% Vo Rated Output Voltage (*11) 2. Remote Current Programming (16 bit) Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated+0.1% of lo Actual Output)(*10) Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated+0.1% of lo Actual Output)(*10) 3. Readback Voltage	mV mV mV mA mA mA	0~1009 0~1009 0~1009 0~1009 0~1009 By elec 0~5V o 0~5V o 0~5V o 0~5V o 0~5V o 0~6V o 0	%, 0~5V et   %, 0~5V et   %, 0~5/16   %,	or 0-100 Kohm fi Nage: 0 Kohm	/, user set juli scale will set on the scale will scale	Lect. Ac   Luser se   Luser se   Luser se   Luser se   Luser se   Ser selec   On mote   On mote   On mote   Adjust   A	curacy a lectAcc lectAcc lectAcc lectAcc devenue for table table table table table table table lectAcc lec	nd linea uracy ar uracy ar uracy ar tact, use  stance ximum at Enable ort: Rem num vol  (coarse a safe), Fc encode ole switc 19,200  C, Local,  1.0 25  1.0 60 60	voltage: e/Disable output 0  0  1.2  30  0.25  2.5  0.50  50	% of ratifity: +/-10: ity: +/-10: ity: +/-10: ity: +/-10: ity: +/-10: ity: +/-10: 30V, maximal in: 6V 5V or op V, maximal in: 6V 5V or op V, maximal in: 6V 6V or op V, maximal in: 6V	ed lout.  wiximum:  cc  cc  wiximum:  ent sele  CV to CC  tt Panel i  100  2.0  50  0.15  15  0.30  30	150   0.10   10   20   20   20   20	300   6.0   150   0.05   5.0   0.10   10	0.03 2.6 0.05 5.2	X	X
2. lout Voltage Programming 3. Vout Resistor Programming 4. lout Resistor Programming 5. On/Off control (rear panel) 6. Output Current monitor 7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL 1. Control functions  2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB / Model 1. Remote Voltage Programming (16 bit) Resolution (0.02% of Vo Rated) Accuracy 0.05%Vo Rated Output Voltage (*11) 2. Remote Current Programming (16 bit) Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated+0.1% of lo Actual Output)(*10) Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated+0.1% of lo Actual Output)(*10) 3. Readback Voltage Resolution of Vo Rated	V	0~1009 0~1009 0~1009 0~1009 0~1009 By elec 0~5V o 0	%, 0~5V c %, 0~5V10 %, 0~5/10 %, 0~5/10 %, 0~5/10 trical. Vo r 0~10V, r 0~1	or O-100 Kohm fi Namer N	/, user set juli scale will scale	Lect. Ac   Luser se	curacy a lectAcc le	nd lineaduracy are uracy are tract, used stance eximum at Enable ort: Remum vol (coarse a safe), For encode ole switch 19,200	voltage: e/Disabl lote, 2~1 tage: 30 and fine oldback or, Numb h and D  0utput (  1.2 30 0.25 2.5 0.50 50	% of ratifity: +/-10: ity: +/-	ed lout.  wiximum:  cc  cc  wiximum:  cc  ent: Loc  num sin  ent sele  tr Panel  100  2.0  50  0.15  15  0.30  30  11.0	150	300   6.0   150   0.05   5.0   0.10   10	600   12.0   300   0.03   2.6   0.05   5.2	X	X
2. Lout Voltage Programming 3. Vout Resistor Programming 4. lout Resistor Programming 5. On/Off control (rear panel) 6. Output Current monitor 7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL 1. Control functions  2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB / Model 1. Remote Voltage Programming (16 bit) Resolution (0.02% of Vo Rated) Accuracy 0.05%Vo Rated Output Voltage (*11) 2. Remote Current Programming (16 bit) Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated+0.1% of lo Actual Output)(*10) Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated+0.1% of lo Actual Output)(*10) 3. Readback Voltage Resolution of Vo Rated Accuracy 0.05% Vo Rated	mV mV mV mA mA mA	0~1009 0~1009 0~1009 0~1009 0~1009 By elec 0~5V o 0~5V o 0~5V o 0~5V o TTL hic Open c Dry col By elec Open c Open	%, 0~5V c/6, 0~5	or 0-100 Kohm fi Nage: 0 Kohm	/, user set juli scale will set on the scale will scale	Lect. Ac   Luser se   Luser se   Luser se   Luser se   Luser se   Ser selec   On mote   On mote   On mote   Adjust   A	curacy a lectAcc lectAcc lectAcc lectAcc devenue for table table table table table table table lectAcc lec	nd linear uracy are uracy are tract, use stance eximum at Enable ort: Remound for the safe), For encode old switch 19,200 c, Local, 50 25 0.60 60 60	voltage: e/Disable output 0  0  1.2  30  0.25  2.5  0.50  50	% of ratifity: +/-10: ity: +/-10: ity: +/-10: ity: +/-10: ity: +/-10: ity: +/-10: 30V, maximal in: 6V 5V or op V, maximal in: 6V 5V or op V, maximal in: 6V 6V or op V, maximal in: 6V	ed lout.  wiximum:  cc  cc  wiximum:  ent sele  CV to CC  tt Panel i  100  2.0  50  0.15  15  0.30  30	150   0.10   10.50	300   6.0   150   0.05   5.0   0.10   10	0.03 2.6 0.05 5.2	X	X
2. Lout Voltage Programming 3. Vout Resistor Programming 4. lout Resistor Programming 5. On/Off control (rear panel) 6. Output Current monitor 7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL  1. Control functions  2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB / Model 11. Remote Voltage Programming (16 bit) Resolution (0.02% of Vo Rated) Accuracy 0.05%Vo Rated Output Voltage (*11) 2. Remote Current Programming (16 bit) Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated) Accuracy (0.1% of lo Rated+0.1% of lo Actual Output)(*10) Resolution of Vo Rated Accuracy 0.05% Vo Rated	mV mV mV mA mA mA mV	0~1009 0~1009 0~1009 0~1009 0~1009 0~1009 By elec 0~5V o 0~5V o 0~5V o 0~5V o 0~5V o 0~6V o 0	%, 0~5V c/6, 0~	or 0-100 Kohm fi Nage: 0 Kohm	/, user sections of the control of t	Lect. Acc.	curacy a lectAcc lectAcc lectAcc lectAcc lectAcc dry control table tries resi : Off, Ma voltage a 6V or sh n. Maxir lectAcc l	nd linear uracy are uracy are tact, use stance eximum at Enable ort: Remound for the control of	voltage: e/Disabl lote, 2~1 tage: 30 and fine oldback or, Numb h and D  0utput or 1,2 30 0.25 25 0.50 50	% of ratify: +/-10 ity: +/-11 ity: +/-13 ity	ed lout. Who frate \$5% of rate	Sink currer	300   6.0   150   0.05   5.0   0.10   10	600   12.0   300   0.03   2.6   0.05   5.2	X	X
2. lout Voltage Programming 3. Vout Resistor Programming 4. lout Resistor Programming 5. On/Off control (rear panel) 6. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 11. Local/Remote analog control indicator 1. S FRONT PANEL 1. Control functions  2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB / Model 1. Remote Voltage Programming (16 bit) Resolution (0.02% of Vo Rated) Accuracy 0.05% Vo Rated Output Voltage (*11) 2. Remote Current Programming (16 bit) Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated) Accuracy (0.5% Vo Rated Accuracy (0.5% Vo Rated Accuracy (0.5% Vo Rated Accuracy (0.5% Vo Rated	V	0~1009 0~1009 0~1009 0~1009 0~1009 0~1009 By elec 0~5V o 0~5V o 0~5V o 0~5V o 0~5V o 0~6V o 0	6, 0~5V c   6, 0	nr O-100 Kohm fr Kkohm fr Khom f	/, user section of the control of th	Lect. Ac	curacy a lectAcc lectAcc lectAcc lectAcc lectAcc dry cont table tries resi coff, Ma voltage a 6V or sh n. Maxim lectAcc lect.	nd linea uracy ar uracy ar uracy ar tact, use  stance stance sximum at Enable ort: Rem num vol (coarse & safe), Fc ele switc 19,200  1.0 25  1.0 60 60  1.5 25	voltage: e/Disable voltage: e/Disable ote, 2~1 tage: 30 and fine output (   0.25 25 0.50 50 1.12	% of ratifity: +/-11. ity: +/-12. ity: +/-13. ity: +/-	ed lout.  % of rate 5% of rate 5% of rate 5% of rate 100 100 100 110 110 100 110 100 110 100 100 110 100 1	10.50   10.5	300   6.0   150   10   10   12   150   0.13	0.03 2.6 0.05 5.2	X	X
2. Lout Voltage Programming 3. Vout Resistor Programming 4. lout Resistor Programming 5. On/Off control (rear panel) 6. Output Current monitor 7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL  1. Control functions  2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB / Model 11. Remote Voltage Programming (16 bit) Resolution (0.02% of Vo Rated) Accuracy 0.05%Vo Rated Output Voltage (*11) 2. Remote Current Programming (16 bit) Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated) Accuracy (0.1% of lo Rated+0.1% of lo Actual Output)(*10) Resolution of Vo Rated Accuracy 0.05% Vo Rated	mV mV mV mA mA mA mV	0~1009 0~1009 0~1009 0~1009 0~1009 0~1009 By elec 0~5V o 0~5V o 0~5V o 0~5V o 0~5V o 0~6V o 0	%, 0~5V c/6, 0~	or 0-100 Kohm fi Nage: 0 Kohm	/, user sections of the control of t	Lect. Acc.	curacy a lectAcc lectAcc lectAcc lectAcc lectAcc dry control table tries resi : Off, Ma voltage a 6V or sh n. Maxir lectAcc l	nd linear uracy are uracy are tact, use stance eximum at Enable ort: Remound for the control of	voltage: e/Disabl lote, 2~1 tage: 30 and fine oldback or, Numb h and D  0utput or 1,2 30 0.25 25 0.50 50	% of ratify: +/-10 ity: +/-11 ity: +/-13 ity	ed lout. Who frate \$5% of rate	Sink currer	300   6.0   150   0.05   5.0   0.10   10	600   12.0   300   0.03   2.6   0.05   5.2	X	X
2. Lout Voltage Programming 3. Vout Resistor Programming 4. lout Resistor Programming 5. On/Off control (rear panel) 6. Output Voltage monitor 7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL 1. Control functions  2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB / Model 1. Remote Voltage Programming (16 bit) Resolution (0.02% of Vo Rated) Accuracy 0.05%Vo Rated Output Voltage (*11) Accuracy (0.1% of lo Rated+0.1% of lo Actual Output)(*10) Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated+0.1% of lo Actual Output)(*10) 3. Readback Voltage Resolution of Vo Rated Accuracy 0.05% Vo Rated 4. Readback Current Resolution for lo Rated 4. Readback Current Resolution for lo Rated Accuracy 0.3% of lo Rated Accuracy 0.3% of lo Rated Accuracy 0.3% of lo Rated Resolution for lo Rated Accuracy 0.3% of lo Rated	WV   MV   MA   MA   MA   MA   MA   MA   M	0~1009 0~1009 0~1009 0~1009 0~1009 By elec 0~5V o 0~5V o 0~5V o 0~5V o 0~5V o 0~6V o 0	%, 0~5V c	rr O-100 Kohm fr KKohm fr KKoh	/, user section of the control of th	Lect. Ac   Luser se	curacy a lectAcc lectAcc lectAcc lectAcc lectAcc devenue a lectAcc lec	stance stance simum yat Enable ort: Rem num vol (coarse a safe), Fc encode ole switch 19,200  1.0 25  1.0 60 60  1.5 25	voltage: e/Disabl lote, 2~1 tage: 30 and fine oldback or. Numb h and D  Output (  1.2 30  0.25 25 0.50 50  1.1 30  1.13 37:50	% of ratifity: +/-10: ity: +/-	ed lout.  wiximum !:  ben: Loc num sin  ent sele  CV to CC  fresses:  100  2.0  50  11.0  50  11.0  50  0.15  22.50	150   0.10   0.20   0.15   15   15   15   15   15   15   15	300   6.0   150   10   12   150   0.13   7.50	0.03 2.6 0.03 5.2 12 300	X	X
2. Lout Voltage Programming 3. Vout Resistor Programming 4. lout Resistor Programming 5. On/Off control (rear panel) 6. Output Current monitor 7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL  1. Control functions  2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB / Model 11. Remote Voltage Programming (16 bit) Resolution (0.02% of Vo Rated) Accuracy 0.05%Vo Rated Output Voltage (*11) 2. Remote Current Programming (16 bit) Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated) Accuracy (0.5% Vo Rated Accuracy 0.05% Vo Rated Accuracy 0.3% of lo Rated output	mV mV mA mA mA mA	0~1009 0~1009 0~1009 0~1009 0~1009 0~1009 By elec 0~5V o 0~5V o 0~5V o 0~5V o 0~5V o 0~6V o 0	%, 0~5V c// %, 0~5V c// %, 0~5/10 c// %, 0~5/10 c// %, 0~5/10 c// %, 0~5/10 c// ki, 0~10 c// ki	or 0-100 Kehm fi Rage: 0 Kehm	/, user sections of the control of t	Lect. Accusers	curacy a lectAcc le	nd linea turacy are uracy are tract, use stance eximum that Enable ort: Remound for the track of	voltage: e/Disabl lote, 2~1 tage: 30 and fine oldback or, Numb h and D  0.25 25 0.50 50 1.2 30 1.13 37.50 1.25	% of ratify: +/-10 ity: +/-11 ity: +/-13 ity	ed lout.  with of rate 59% of	150   10.50   75   15   1.10	300   6.0   150   12   150   0.13   7.50   0.15	600   12.0   300   0.03   2.6   0.05   5.2   12   300   0.12   3.90   0.10	X	X
2. lout Voltage Programming 3. Vout Resistor Programming 4. lout Resistor Programming 5. On/Off control (rear panel) 6. Output Current monitor 7. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 12. Local/Remote analog control indicator 1.5 FRONT PANEL 1. Control functions  2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB / Model 1. Remote Voltage Programming (16 bit) Resolution (0.02% of Vo Rated) Accuracy 0.05%Vo Rated Output Voltage (*11) 2. Remote Current Programming (16 bit) Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated+0.1% of lo Actual Output)(*10) Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated+0.1% of lo Actual Output)(*10) 3. Readback Voltage Resolution of Vo Rated Accuracy 0.05% Vo Rated 4. Readback Current Resolution of lo Rated Accuracy 0.3% of lo Rated (*10) Resolution of lo Rated (*10) Resolution of lo Rated (*10) Resolution (0.1% of Vo Rated) Resolution (0.1% of Vo Rated)	mV mV mA mA mA mA mA	0~1009 0~1009 0~1009 0~1009 0~1009 0~1009 By elec 0~5V o 0~5V o 0~5V o 0~5V o 0~5V o 0~6V o 0	%, 0~5V c	or 0-100 Kehm fr New York   Week    Week   Week   Week   Week    Week   Week   Week	/, user section of the control of th	Lect. Ac   Luser se	curacy a lectAcc lectAcc lectAcc lectAcc lectAcc devectAcc dry cont table tries resi : Off, Ma voltage a 6V or sh n. Maxir lencoders (auto, t) adjust EEE enals 600 and lencoders (auto, t) adjust 600 and lenco	stance ximum yat Enable ort: Rem num vol (coarse a faste) For encode old suite of the suite of t	voltage: e/Disabl lote, 2~1 tage: 30 and fine oldback or. Numb h and D  Output 0  1.2 30  0.25 25 0.50 50  1.2 30  1.13 37.50 1.25 75	% of ratifity: +/-10: ity: +/-	ed lout.  wiximum !:  ben: Loc  c  ben: Loc  c  t Panel    100  2.0  50  11.0  50  11.0  50  11.05  45  100	150   150	300   6.0   150   12   150   0.15   15   300   15   15   300   15   15   300   15   15   300   15   15   300   15   15   300   10   10   10   10   10   10   1	0.03 0.03 2.6 0.05 5.2 12 300 0.12 3.90 0.10 7.8	X	X
2. lout Voltage Programming 3. Vout Resistor Programming 4. lout Resistor Programming 5. On/Off control (rear panel) 6. Output Voltage monitor 8. Power Supply OK signal 9. CV/CC indicator 10. Enable/Disable 11. Local/Remote analog control 11. Local/Remote analog control indicator 11. Enable/Disable 11. Local/Remote analog control indicator 1. S FRONT PANEL 1. Control functions  2. Display 3. Indications 1.6 Interface RS-232&RS-485 or Optional GPIB / Model 1. Remote Voltage Programming (16 bit) Resolution (0.02% of Vo Rated) Accuracy 0.05% Vo Rated Output Voltage (*11) 2. Remote Current Programming (16 bit) Resolution (0.002% of lo Rated) Accuracy (0.1% of lo Rated+0.1% of lo Actual Output)(*10) 3. Readback Voltage Resolution of Vo Rated Accuracy 0.05% Vo Rated 4. Readback Current Resolution of lo Rated Accuracy 0.3% of lo Rated (*10) Resolution of lo Rated Accuracy 0.3% of lo Rated (*10) Resolution of lo Rated Accuracy 0.3% of lo Rated (*10) Resolution of lo Rated (*10) S. OVP/UVL Programming	mV mV mA mA mA mA mV mV	0~1009 0~1009 0~1009 0~1009 0~1009 0~1009 By elec 0~5V o 0~6V o 0	6, 0~5 V c	ru O-100 Kohm fr Kkohm fr Kkohm fr Kkohm fr Kage: 0 Kohm fr Ka	/, user section of the control of th	Luser se	curacy a lectAcc le	nd linear uracy are uracy are tract, use stance eximum that Enable ort: Remount of the traction of tra	voltage: e/Disabl lote, 2~1 tage: 30 and fine oldback or. Numb h and D  Output 0  1.2 30  0.25 25 0.50 50  1.2 30  1.13 37.50 1.25 75	% of ratifity: +/-10: ity: +/-	ed lout.  wiximum :  sent selection to pen: Loc num sin  ent selection to pen: Loc num sin  tt Panel    100  2.0 50  11.0 50  11.0 50  11.0 10.0 10.0	150   150	300   6.0   150   12   150   0.15   15   300   3000   3000   3000	0.03 2.6 0.05 5.2 12 300 0.12 3.90 0.10 7.8	X	X

<sup>\*1:</sup> Minimum voltage is guaranteed to maximum 0.2% of Vo Rated.
\*2: Minimum current is guaranteed to maximum 0.4% of lo Rated.
\*3: At maximum output power.
\*4: 85~132Vac or 170~265Vac, constant load.

 <sup>\*4:88~132</sup>VaC or 170~265VaC, constant load.
 \*5: From No-load to Full-load, constant input voltage.
 \*6: For load voltage change, equal to the unit voltage rating, constant input voltage.
 \*7: For 6V models the ripple is measured at 2~6V output voltage and full output current. For other models, the ripple is measured at 10~100% output voltage and full output current.

<sup>\*8:</sup> Time for the output voltage to recover within 0.5% of its rated for a load change 10~90% of rated output, Output set-point:10~100%.
\*9: For 6V~300V models: measured with JEITA RC-9131A 1:1 probe. For 600V model: measured with 10:1 probe Accuracy -Values have been calculated at Vo Rated & Io Rated.
\*10: The Constant Current programming readback and monitoring accuracy does not include the

warm-up and Load regulation thermal drift. \*11: Measured at the sense point.

# **General Specifications Genesys™ 750W/1500W**


2.1 INPUT CHARACTERISTICS	
1. Input voltage/freq. (*1)	85~265Vac continuous, 47~63Hz, single phase
2. Power Factor	0.99 @100/200Vac, rated output power.
3. EN61000-3-2,3 compliance	Complies with EN61000-3-2 class A and EN61000-3-3 at 20~100% output power.
. Input current 100/200Vac	750W:10.5A / 5A, 1500W:21A / 11A
5. Inrush current 100/200Vac	750W :Less than 25A, 1500W :Less than 50A
5. Hold-up time	More than 20mS, 100Vac, at 100% load.
2.2 POWER SUPPLY CONFIGURATION	
. Parallel Operation	Up to 4 units in master/slave mode with single wire current balance connection
. Series Operation	Up to 2 units, with external diodes. 600V Max to Chassis ground
2.3 ENVIRONMENTAL CONDITIONS	
. Operating temp	0~50°C. 100% load.
. Storage temp	-20~70°C
Operating humidity	30~90% RH (non-condensing).
Storage humidity	10~95% RH (non-condensing).
Vibration	MIL-810E, method 514.4, test cond. I-3.3.1. The EUT is fixed to the vibrating surface.
. Shock	Less than 20G, half sine, 11mSec. Unit is unpacked.
'. Altitude	Operating: 10000ft (3000m), Derat output current by 2%/100m above 2000m, Non operating: 40000ft (12000m).
.4 EMC	
. Applicable Standards:	
2. ESD	IEC1000-4-2. Air-disch8KV, contact disch4KV
3. Fast transients	IEC1000-4-4.2KV
I. Surge immunity	IEC1000-4-5, 1KV line to line, 2KV line to ground
. Conducted immunity	IEC1000-4-6.3V
. Radiated immunity	EC1000-4-3, 3V/m
Conducted emission	EN55022B, FCC part 15J-B, VCCI-B.
Radiated emission	EN55022A, FCC part 15B, VCCI-B.
9. Voltage dips	EN61000-4-11
0. Conducted emission	EN55022B, FCC part 15-B, VCCI-B.
1. Radiated emission	EN55022A, FCC part 15-A, VCCI-A.
2.5 SAFETY	
.Applicable standards:	UL 60950-1, CSA22.2 No.60950-1, IEC 60950-1, EN 60950-1
	Models with Vout 50V: Output is SELV, all communication/control interfaces (RS232/485, IEEE, Isolated Analog,
	LAN, Sense, Remote Programming and Monitoring) are SELV.  Models with 60V Vout 400V: Output is Hazardous, communication/control interfaces: RS232/485, IEEE,
	Models with 60V Vout 400V: Output is Hazardous, communication/control interfaces: RS232/485, IEEE,
2.Interface classification	Isolated Analog, LAN, Remote Programing and Monitoring (pins 1-3, pins14-16) are SELV, Sense, Remote
	Programming and Monitoring (pins 8-13, pins 21-25) are Hazardous.  Models with 400V Yout 600V: Output is Hazardous, all communication/control interfaces (RS232/485, IEEE,
	Models with 400V Vout 600V: Output is Hazardous, all communication/control interfaces (RS232/485, IEEE,
	Isolated Analog, LAN, Sense, Remote Programming and Monitoring) are Hazardous.  Vout 50V models: Input-Output (SELV): 4242VDC 1min, Input-communication/control (SELV): 4242VDC 1min,
	vout 50V models: Input-Output (SELV): 4242VDC 1min, Input-communication/control (SELV): 4242VDC 1min,
	Input-Ground: 2828VDC 1min.
	60V Vout 150V models: Input-Output (Hazardous): 3425VDC 1min, Input-communication/control (SELV):
3.Withstand voltage	4242VDC 1min, Output(Hazardous)-SELV: 2307VDC 1min, Output(Hazardous)-Ground: 1414VDC 1min,
staria voltage	Input-Ground: 2828VDC 1min.
	300V Vout 600V models: Input-Output(Hazardous): 3490VDC 1min, Input-communication/control (SELV):
	4242VDC 1min, Hazardous. Output-communication/control(SELV): 4242VDC 1min,
Handatian maintan	Output(Hazardous)-Ground: 2738VDC 1min, Input-Ground: 2828VDC 1min.
I.Insulation resistance	More than 100Mohm at 25°C, 70% RH.
2.6 MECHANICAL CONSTRUCTION	
. Cooling	Forced air flow: from front to rear. No ventilation holes at the top or bottom of the chassis; Variable fan speed.
2. Dimensions (WxHxD)	W: 422.8mm, H: 43.6mm, D: 432.8mm (excluding connectors, encoders, handles, etc.)
. Weight	750W: 7Kg (15 Lbs) 1500W: 8.5Kg (18 Lbs)
. Weight	7-50W: FC320 AC Injet.
1. AC Input connector	1500W: Screw terminal block, Phoenix P/N: FRONT-4-H-7.62, with strain relief
5. Output connectors	6V to 60V models: Bus-bars (hole Ø 8.5mm). 80V to 600V models: wire clamp connector, Phoenix P/N: FRONT-4-H-7.62
•	
.7 RELIABILITY SPECS . Warranty	5 years.

<sup>\*1:</sup> For cases where conformance to various safety standards (UL, IEC etc.) is required, to be described as 100-240Vac (50/60Hz). All specifications subject to change without notice.

#### Genesys<sup>™</sup> Power Parallel and Series Configurations

#### Parallel operation - Master/Slave:

Active current sharing allows up to four identical units to be connected in an auto-parallel configuration for four times the output power. In Advanced Parallel Master/Slave Mode, total current is programmed and reported by the Master, Up to four supplies act as one.

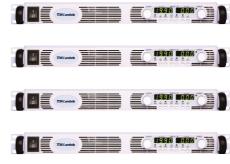

#### **Series operation**

Up to two units may be connected in series to increase the output voltage or to provide bipolar output. (Max 600V to Chassis Ground).

#### Remote Programming via RS-232 & RS-485 Interface

Standard Serial Interface allows chain control of up to 31 power supplies on the same bus with built-in RS-232 & RS-485 Interface.





P/N: IEEE

## **Programming Options (Factory installed)**

#### Digital Programming via IEEE Multi-Drop Interface

- Allows IEEE Master to control up to 30 slaves over RS-485 daisy-chain
- Only the Master needs be equipped with IEEE Interface
- IEEE 488.2 SCPI Compliant
- Program Voltage
- Measure Voltage
- Over Voltage setting and shutdown
- Error and Status Messages

- Program Current
- Measure Current
- Current Foldback shutdown

#### **Isolated Analog Programming**

Four Channels to Program and Monitor Voltage and Current. Isolation allows operation with floating references in harsh electrical environments. Choose between programming with Voltage or Current. Connection via removable terminal block: Phoenix MC1,5/8-ST-3.81.

- Voltage Programming, user-selectable 0-5V or 0-10V signal.
   Power supply Voltage and Current Programming Accuracy ±1%
   Power supply Voltage and Current Monitoring Accuracy ±1.5%
- Current Programming with 4-20mA signal.
   Power supply Voltage and Current Programming Accuracy ±1%
   Power supply Voltage and Current Monitoring Accuracy ±1.5%

P/N: IS510

P/N: IS420

LAN Interface LXI Compliant to Class C P/N: LAN

- Meets all LXI-C Requirements
- Address Viewable on Front Panel
- Fixed and Dynamic Addressing
- Compatible with most standard Networks
- VISA & SCPI Compatible
- LAN Fault Indicators
- Auto-detects LAN Cross-over Cable
- Fast Startup

## Power Supply Identification / Accessories How to order

GEN	600 -	- 2.6	-	-
			Factory Options	AC Cable option is 750W only
Series	Output	Output	Option: IEEE	Region: E - Europe
Name	Voltage	Current	IS510	GB - United Kingdom
	(0~600V)	(0~2.6A)	IS420	J - Japan
			LAN	I - Middle East
				U- North America

#### Models 750/1500W

Model	Output Voltage VDC	Output Current (A)	Output Power (W)
GEN6-100	0~6V	0~100	600
GEN6-200	0~60	0~200	1200
GEN8-90	0~8V	0~90	720
GEN8-180	U~8V	0~180	1440
GEN12.5-60	0 12 51/	0~60	750
GEN12.5-120	0~12.5V	0~120	1500
GEN20-38	0~20V	0~38	760
GEN20-76	U~20V	0~76	1520
GEN30-25	0. 201/	0~25	750
GEN30-50	0~30V	0~50	1500
GEN40-19	0~40V	0~19	760
GEN40-38	U~4UV	0~38	1520

Model	Output Voltage VDC	Output Current (A)	Output Power (W)
GEN50-30	0~50V	0~30	1500
GEN60-12.5	0~60V	0~12.5	750
GEN60-25	0~607	0~25	1500
GEN80-9.5	0~80V	0~9.5	760
GEN80-19	U~8UV	0~19	1520
GEN100-7.5	0~100V	0~7.5	750
GEN100-15	0~100V	0~15	1500
GEN150-5	0~150V	0~5	750
GEN150-10	U~150V	0~10	1500
GEN300-2.5	0.2001/	0~2.5	750
GEN300-5	0~300V	0~5	1500
GEN600-1.3	0 6001/	0~1.3	780
GEN600-2.6	0~600V	0~2.6	1560

## **Factory option**

RS-232/RS-485 Interface built-in Standard **GPIB** Interface Voltage Programming Isolated Analog Interface Current Programming Isolated Analog Interface LAN Interface (Complies with LX Class C)

# P/N

IEEE IS510 IS420 LAN

#### AC Cords sets (750W only)

Region	Europe	United Kingdom	Japan	Middle East	North America	
Output Power	750W	750W	750W	750W	750W	
AC Cords	10A/250Vac L=2m	10A/250Vac L=2m	13A/125Vac L=2m	10A/250Vac L=2m	13A/125Vac L=2m	
Wall Plug	INT'L 7/VII	BS1363		SI-32	NEMA 5-15P	
Power Supply	IEC320-C13	IEC320-C13	IEC320-C13	IEC320-C13	IEC320-C13	
Connector						
Part Number	P/N: GEN/E	P/N: GEN/GB	P/N: GEN/J	P/N: GEN/I	P/N:GEN/U	

#### Accessories

#### 1. Communication cable

RS-232/RS-485 Cable is used to connect the power supply to the PC Controller.

Mode	RS-485	RS-232	RS-232
PC Connector	DB-9F	DB-9F	DB-25F
Communication Cable	Shield Ground L=2m	Shield Ground L=2m	Shield Ground L=2m
Power Supply Connector	EIA/TIA-568A (RJ-45)	EIA/TIA-568A (RJ-45)	EIA/TIA-568A (RJ-45)
P/N	GEN/485-9	GEN/232-9	GEN/232-25


#### 2. Serial link cable\*


Daisy-chain up to 31 Genesys<sup>™</sup> power supplies.

Mode	Power Supply Connector	Communication Cable	P/N
RS-485	EIA/TIA-568A (RJ-45)	Shield Ground L=50cm	GEN/RJ45


<sup>\*</sup> Included with power supply

# Outline Drawing Genesys™ 750W/1500W Units

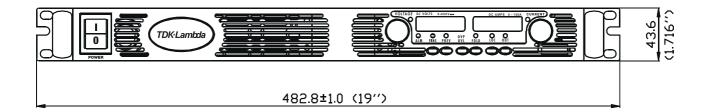

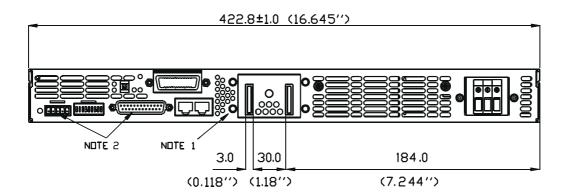



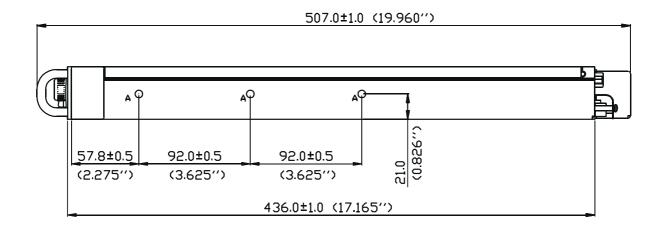

#### **NOTE**

- 1. Bus bars for 6v to 60v models (shown) Wire clamp connector for 80V to 600V models
- 2. Plug connectors included with the power supply
- 3. Chassis slides mounting holes #10-32 marked "A" GENERAL DEVICES P/N: C-300-S-116 or equivalent